Catalogue

General Notices For Use III

Disclaimer III

Box Contents IV

1 M776 Introduction 1

1.1 Status and Reminder 1

2 Quick Start Guide 2

2.1 Keys Function 2

2.2 Startup and Shutdown 2

2.3 Open and Close of the Screen 2

2.4 Usage of Touch Screen 3

2.5 Home Page 4

2.6 Visit Application Procedures 7

2.7 USB Connection 7

2.8 Typing words 8

2.9 Operation Technique 10

3 Basic Setting 10

3.1 SIM Management 10

3.2 Wireless and Internet 12

3.3 Bluetooth 15

3.4 Data Usage 18

3.5 More 19

3.6 Contextual Model 23

3.7 Display 25

3.8 Storage 29

3.9 Battery 32

3.10 Application program 32

3.11 Account and Sync 34

3.12 Location service 35

3.13 Safety setting....39
3.14 Language and Input Method....41
3.15 Backup and Reset....42
3.16 Date and Time....43
4 Multi-Media....47
4.1 Music....47
4.2 Video....48
4.3 Photo Gallery....48
4.4 Camera....49
4.5 FM Radio....50
5 Communication Function....52
5.1 Phone....52
5.2 Text Message....52
5.3 Contact List....53
6 Internet....54
6.1 Browser....54
6.2 Email....56
7 GPS Function....58
8 Other Application Procedures....59
8.1 Clock....59
8.2 Calculator....59
8.3 File Manager....60
8.4 Recorder....63
Appendix Ⅰ Frequently Asked Questions....64

General Notices For Use

—This product is a highly advanced electronics device, disassembly, customization or repairs without the appropriate knowledge and pre-cautions can lead to dangerous situations with chance on damaging the product and serious injuries.

— Avoid use in extreme conditions such as high and low temperatures, high huTabletity or moist environments and around magnetic fields. Also avoid long-time exposure to sunlight.

—Only use by the manufacturer permitted accessories to avoid damages to the product with possibly warranty loss.

—Please kindly insert your SIM Card as follow:

Disclaimer

—The screenshots are for Android reference only. They may be made on a device with a different resolution or hardware configuration than yours and therefore can be slightly different that the final product.

—The manufacturer takes no responsibility for loss of information or data caused by hardware or software failure. The user is responsible for performing timely backups of important data.

—All information and images used in this user manual are provided ‘as is’ and are subject to change without notice.

—The manufacturer accepts no liability for the information offered in this document.

Box Contents

—Android Tablet PC
—Device charger (DC / 5V – 2A)
—USB Cable
—OTG Cable
—Earphone
—Canvas Bag
—Stylus Pen
—Instruction manual

1 M776 Introduction

1.1 Status and Reminder

Reminder icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

	New email		Airplane Mode on
	USB connected		USB debugging connected
	Return button		Downloading
	Setting button & Display recently-used application		Home button
	Current electric volume.		WIFI connected, internet is available

Reminder board

Reminder icons will work while receiving emails, WIFI is open, you can open the reminder board to view the detailed information.

Open the reminder board

When the reminder column shows new reminder icon, please hold the column and slip down your finger, then the reminder board is opened.

2 Quick Start Guide

2.1 Keys Function

Keys Funcction Description：

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume +（up）	increase the volume
Volume -（down）	decrease the volume
HOME button （home）	Click it in any interface will return to main interface.
Back button（back）	click it in any interface will return to previous menu
Menu button	This button will display in menu interface.
Setting button	Can set the system and other menus &display recently browsed history

2.2 Startup and Shutdown

Startup

Long press **POWER key for three seconds,** you can enter into startup picture. The system enters into screen lock status, please unlock it.

Shutdown

1. Long press POWER, it will popoup shutdown window.

2. Shutdowm window contains mute mode, airplane mode,reboot mode and shutdown four options.

3. Click Shutdown is the last step.

2.3 Open and Close of the Screen

Screen will be closed on its own when no operation happens.

1. Screen will be closed on its own if no operation happens for some time to save battery power

2. When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.

Picture 2.1

2.4 Usage of Touch Screen

Operating methods

There are below methods to view the main screen, menu and application procedure in your TABLET.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizoncial movement by finger.

Pull

Before you pull, you need to hold the it with strenghth until you pull it into the position you want.

Rotate

For most pictures, you only need to retate the TABLET sidewise to change the screen direction from horizoncial to vertical. For instance, when you are typing wods, and watching movies.

2.5 Home Page

Main interface as below **picture 2.2**, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

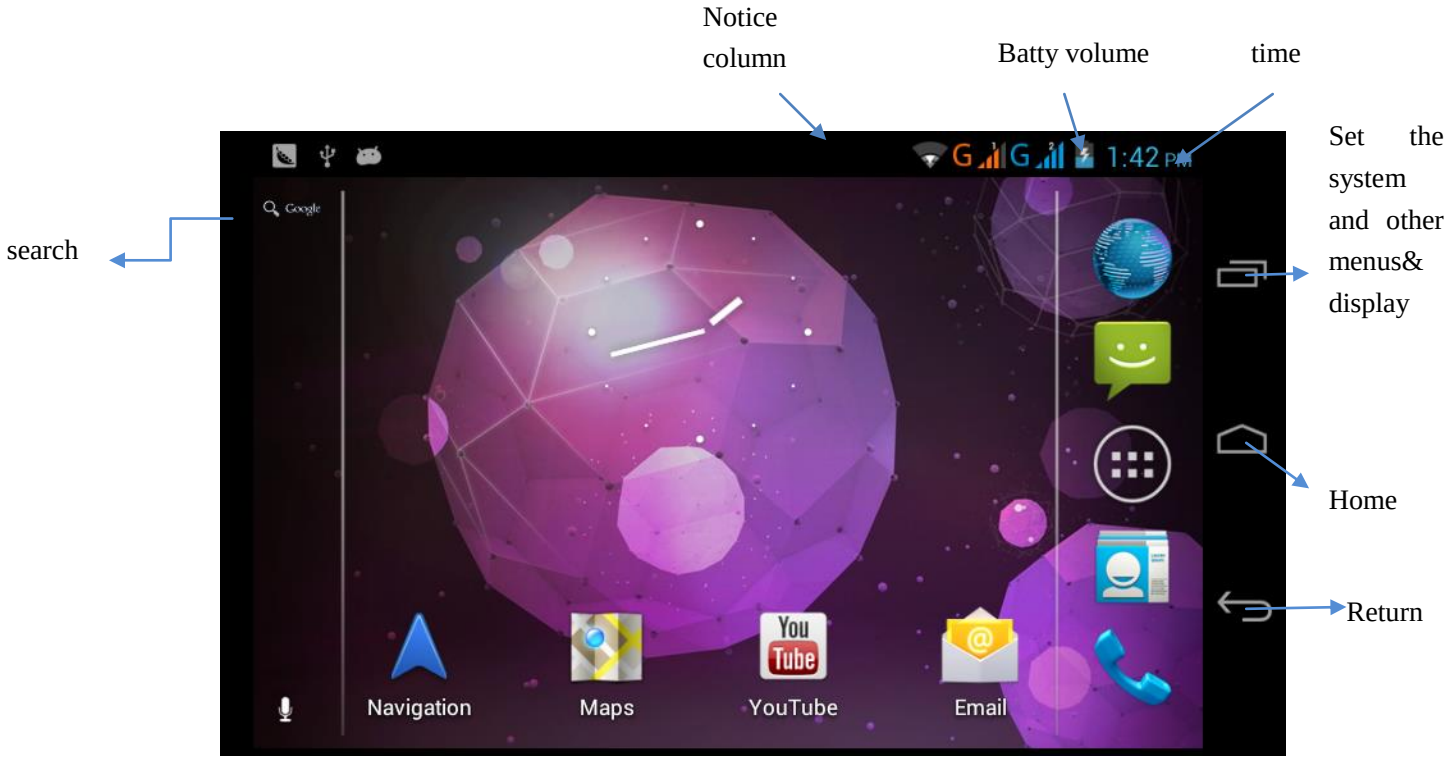

Picture 2.2

The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, **as Picture 2.3.**

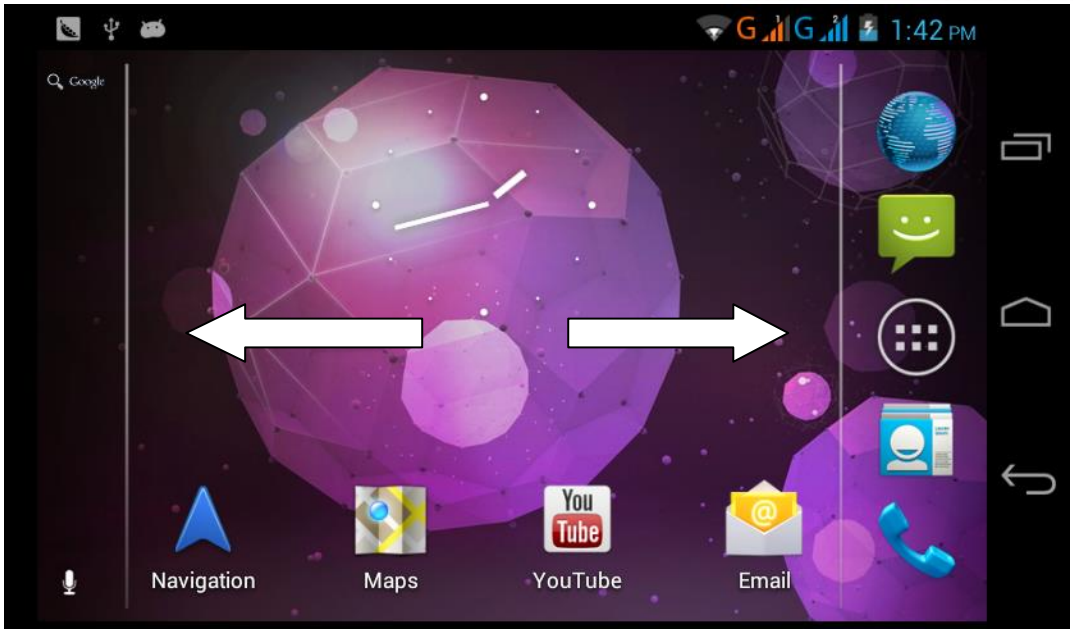

Picture 2.3

The shortcut icons management in desktop application.

Create folder icon in desktop

1. Drag the icons need to be put together on one icon(can also overlay several icons), **as Picture 2.4.**

2. Then click the overlayed icons, the applications can be folded, **as Picture 2.5.**

Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similiar with Apple IOS system), the icons position can be changed through long press.

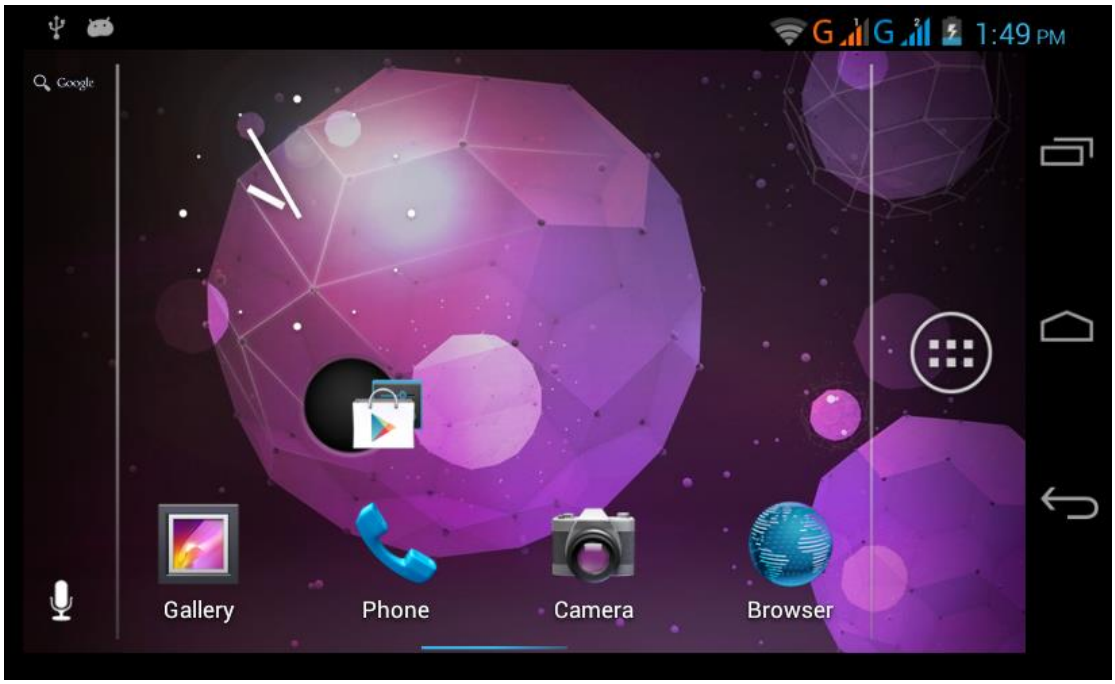

Picture 2.4

Picture 2.5

Remove the icons in desktop

1. Long press the icons need to be remove, then on the right above of the screen, it will appear 

icons.

2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.

2. Click the gallery or wallpaper gallery to select the wallpaper.

2.6 Visit Application Procedures

Click in right top of Picture 2.2, enter into main interface **as Picture 2.6**, choose the application procedure you want to visit.

Picture 2.6

2.7 USB Connection

Storage configuration

Before transmitting documents, you have to conduct storage configuration for your Tablet:

1. Connect the TABLET and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the TABLET status and reminder to learn how to open the board.
3. In the reminder board, click the “USB Connected”, it will as below Picture 3.4, then click “open USB storage configuration”.
4. Now the USB is connected successfully.

1:49 PM
USB mass storage
USB connected
You've connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android device.
Turn on USB storage

Picture 2.7

Copy the document into memory card

1. Connect the TABLET to computer with USB cable.
2. As TABLET storage configuration, it is connected with computer successfully.
3. Open the “My computer” in your computer, check the items in “removable disc”.
4. Copy the documents you need into “removable disc”.
5. After copying finishes, click “shutdown the USB storage configuration” to uninstall.

Notice: When the TABLET is connected with USB cable, and you open the USB storage configuration, you can’t view the memory card through the TABLET. Only after you detach the USB cable, you can view the memory card in the TABLET.

2.8 Typing words

Use the screen keyboard

When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:

1. Android keyboard
2. Google Pinyin

Choose the typing method you want

1. Click Setting pocedure application.

2. Click Language and Keyboard.

3. In the text setting area will reveal all the installed words-typing methods in your TABLET.

4. Tick the typing method you want.

Use and switch of input method

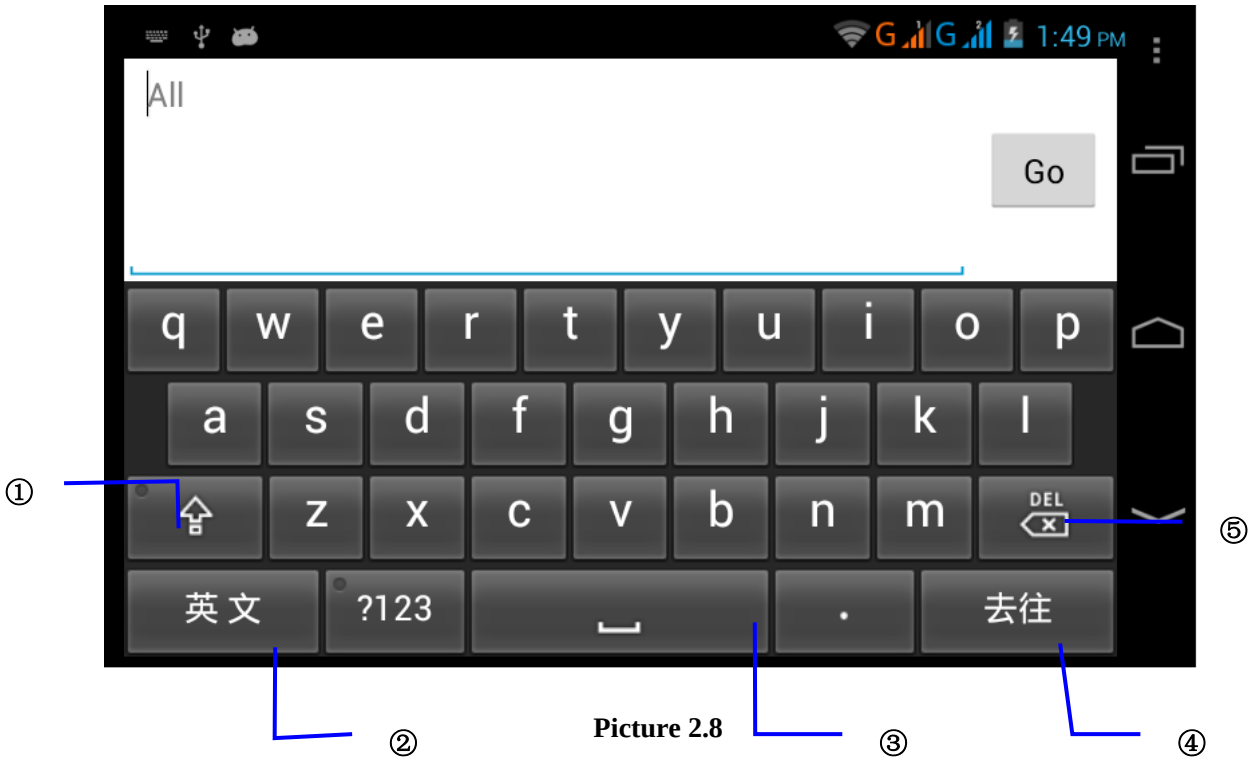

Picture 2.8

1	switch the capital and small letter
2	switch the mode of words input
3	click to insert the space
4	click input to execute
5	delete the character in the left of cursor, click and hold to delete all the characters in the left og the cursor.

2.9 Operation Technique

Enter widgets interface

In the application interface,click widgets on the above of screen, or slide the screen, it will swtich into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.

Create application shortcut icons in the desktop

In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

Remind: If the target position has no space, the widget won't be add in the main screen.

3 Basic Setting

3.1 SIM Management

3.1-1 Voice call

Click settings in main menu, choose SIM Management, **as Picture 3.1**

Picture 3.1

Click voice call, choose defaulted SIM card, **as Picture 3.2**

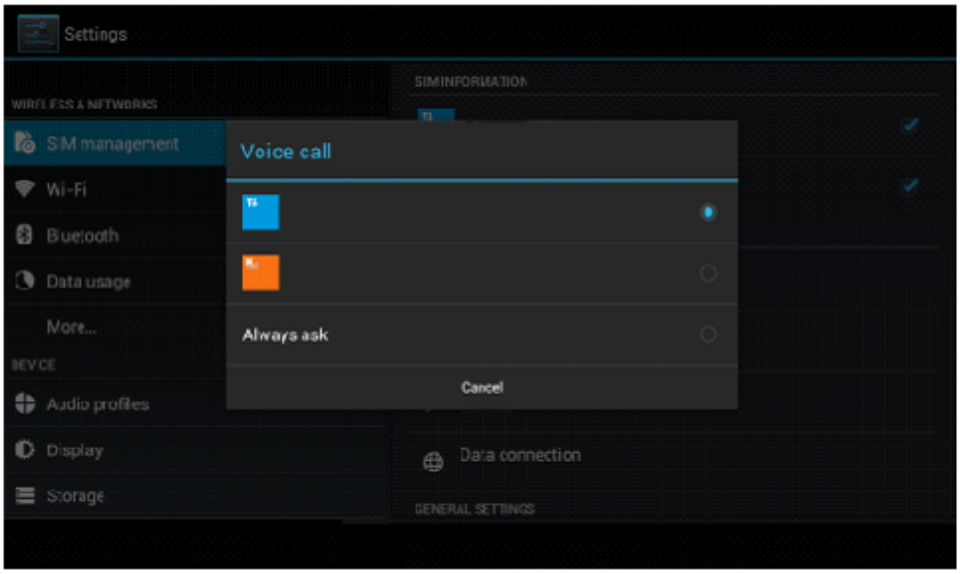

Picture3.2

3.1-2 Video Call

Click settings in main menu, choose SIM Management, and click video call, choose defaulted SIM card when makes video call, **as Picture 3.3**

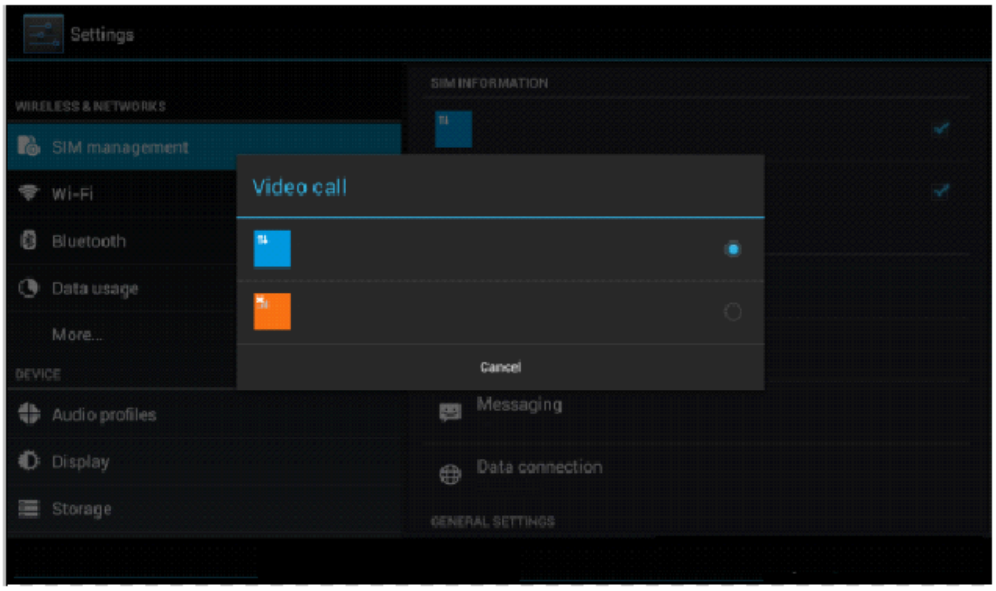

Picture 3.3

3.1-3 Message

Click settings in main menu, choose SIM Management, click message, choose the defaulted SIM card when sends message, **as Picture 3.4**

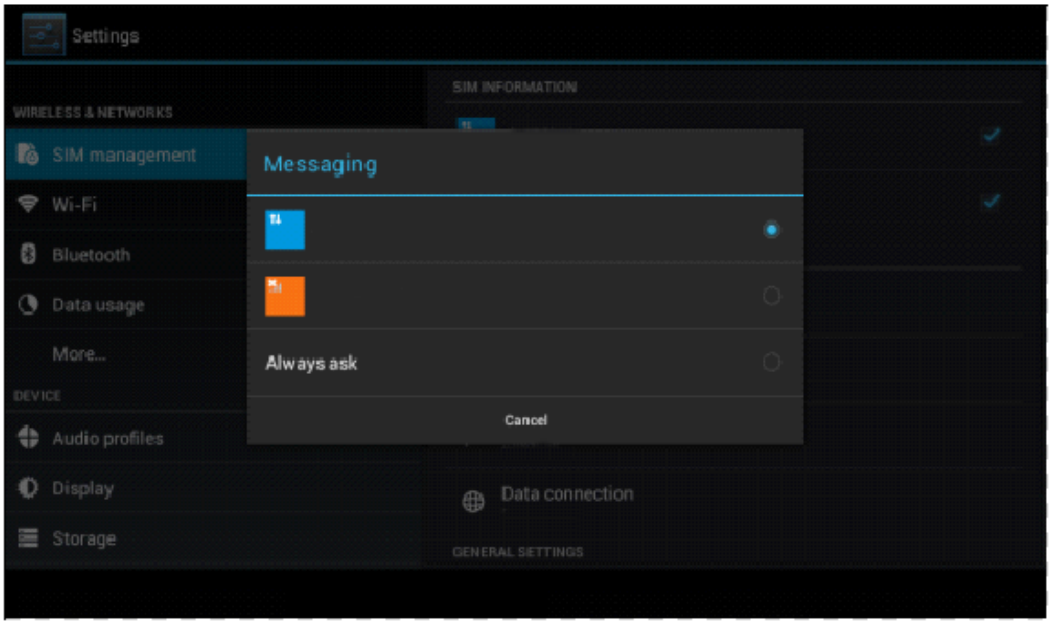

Picture 3.4

3.1-4 Data Connection

Click setting application in main menu, choose SIM management, click data connection, choose the defaulted SIM card, **as Picture 3.5**

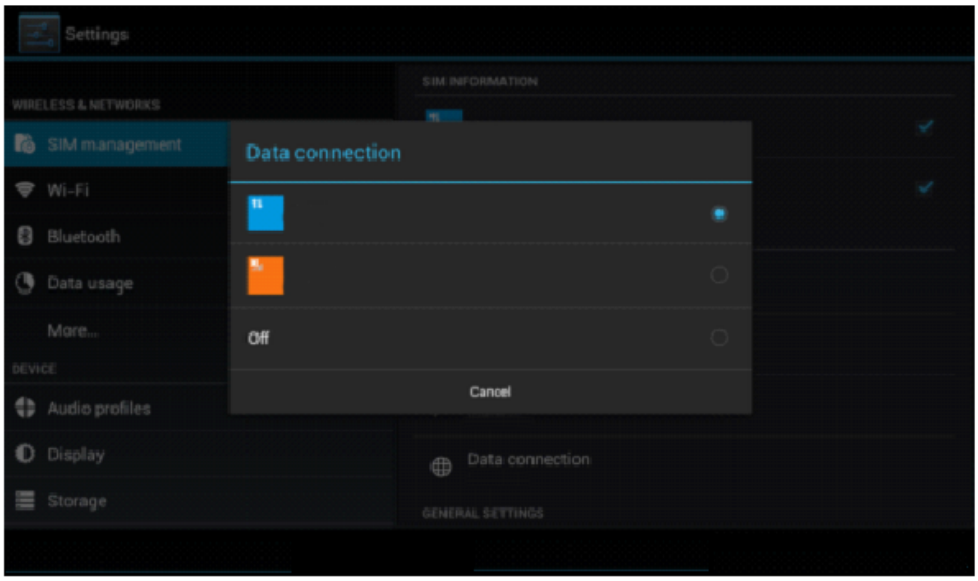

Picture 3.5

3.2 Wireless and Internet

1. Connect Wi-Fi

1) In the main menu or interface, choose **setting** application procedure.

2) Click WLAN, open Wi-Fi, TABLET will automatically search the available

Wi-Fi wireless internet. As **Picture 3.6**

3) Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.

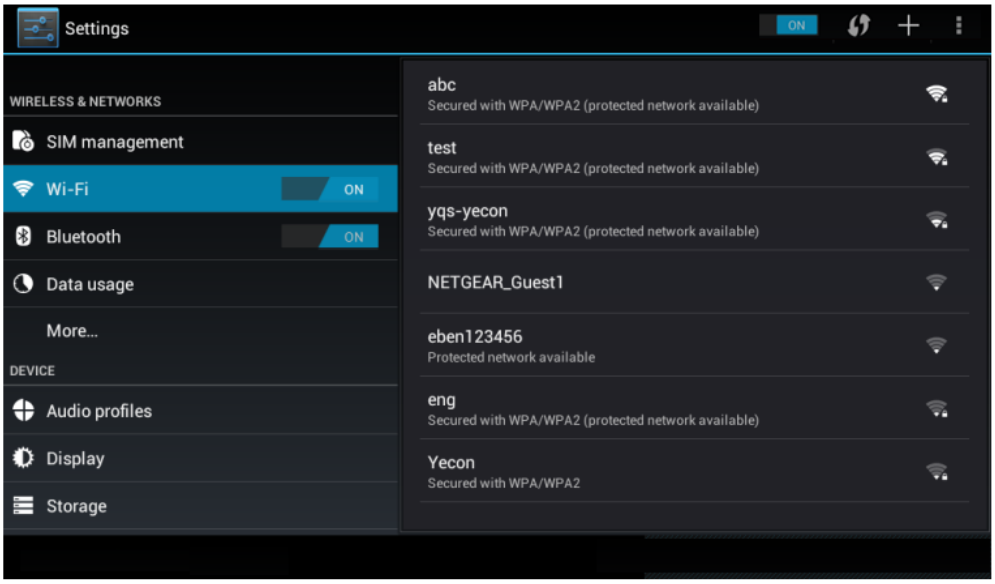

Picture 3.6

2. Network

1) **Click** ADD NETWORK icon in right top, **as Picture 3.7**

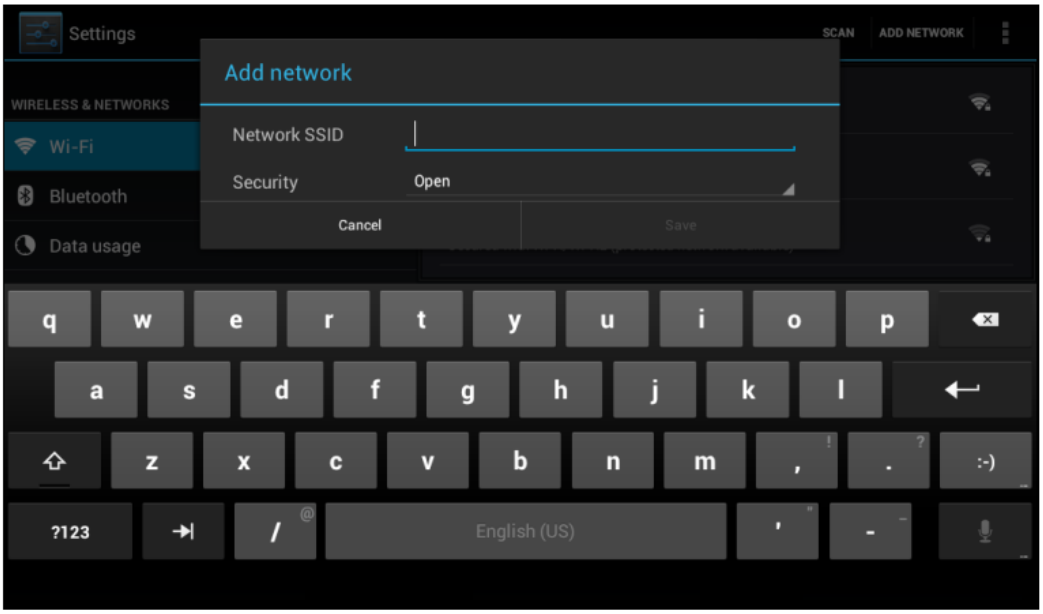

Picture 3.7

2) Input network SSID, the wireless network name, click save.

3) Click user name already saved, click connect to use network, **as Picture 3.8**

Picture3.8

3. Network Notice

If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network, as Picture **3.6**

4. Keep WI-FI on during sleep..

1. Click icon in right top of **Picture 3.8,** select **advanced**.
2. Click **Keep WI-FI on during sleep, as Picture 3.9**

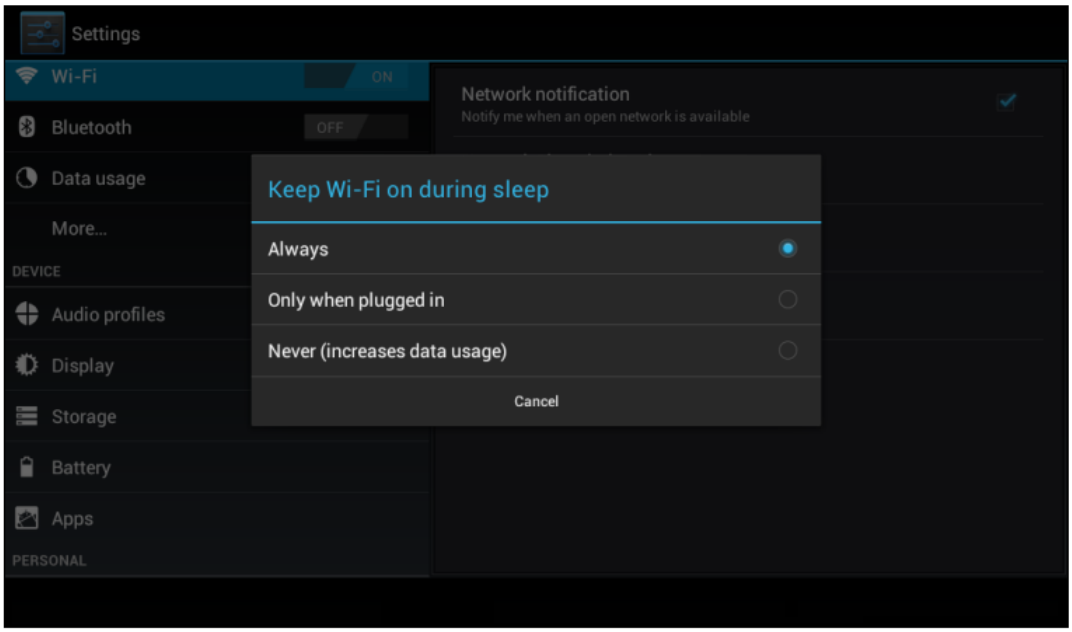

Picture 3.9

3.3 Bluetooth

Bluetooth function operation

1. Click setting application in main menu interface

2. Click bluetooth and open it.

3. If somebody open bluetooth in your surroudings, click search device in right above, then TABLET will automatically search the bluetooth device nearby. **As picture 3.10**

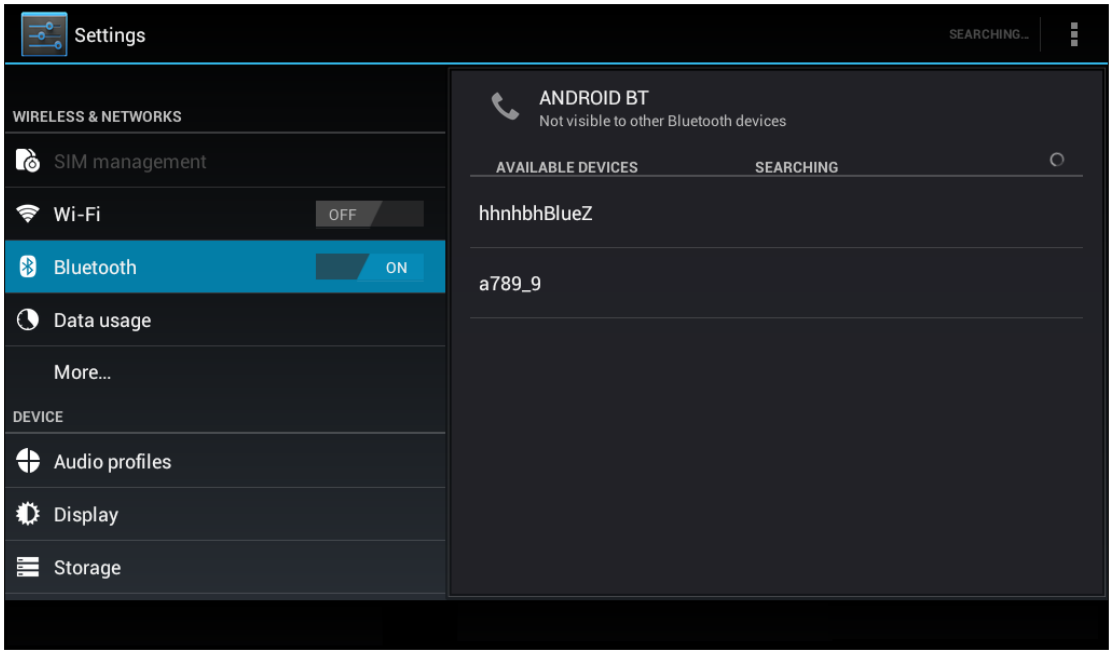

Picture 3.10

1. Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.

2. After match successfully, choose the operation you want to, click to enter into **Picture 3.11.**

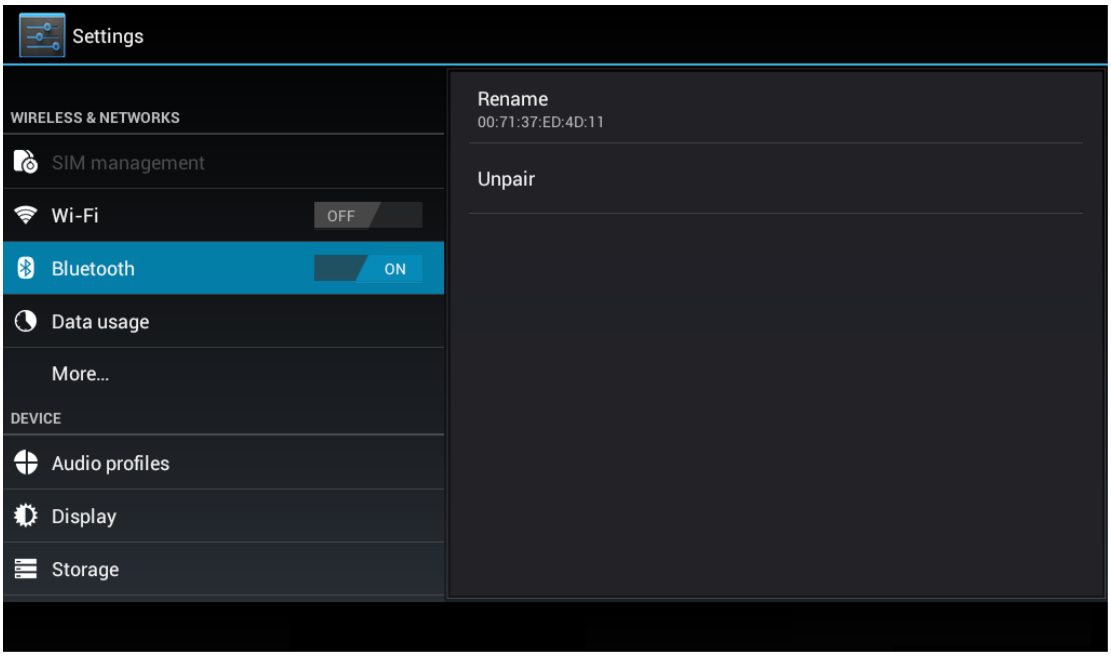

Picture 3.11

Bluetooth setting

1. Rename tablet

Click icon in right top of **Picture 3.10**, **as Picture 3.12**, select rename tablet, you can rename it as you want.

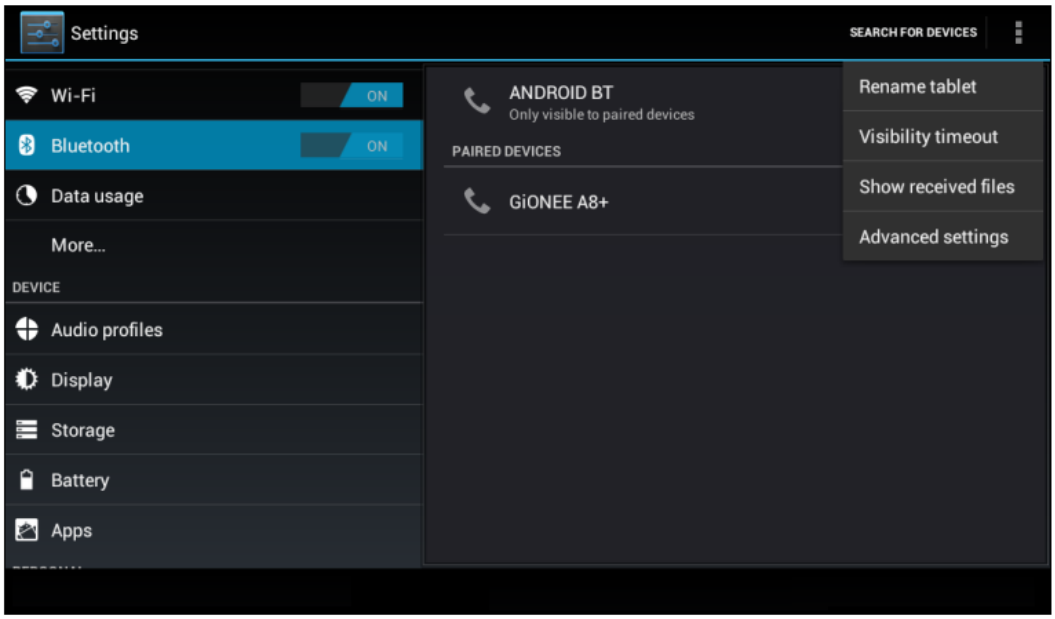

Picture 3.12

2. Check visibility timeout

Select **visibility timeout setting in Picture 3.12,** choose the time you want to set, as Picture 4.13(Note: check overtime setting is the time setting when Bluetooth is checked)

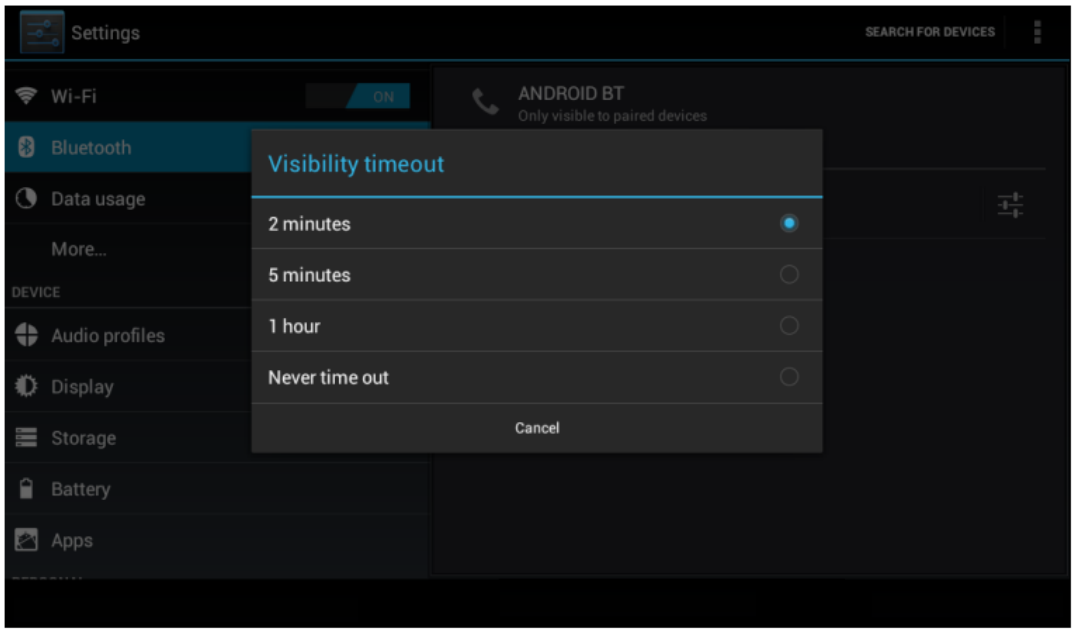

Picture 3.13

3. Display the file you received

Choose display the file you received in **Picture 3.12**, you can view download and upload files.

4. Bluetooth advanced setting

Choose Bluetooth advanced setting in **Picture 3.12**, enter into **Picture 3.14**

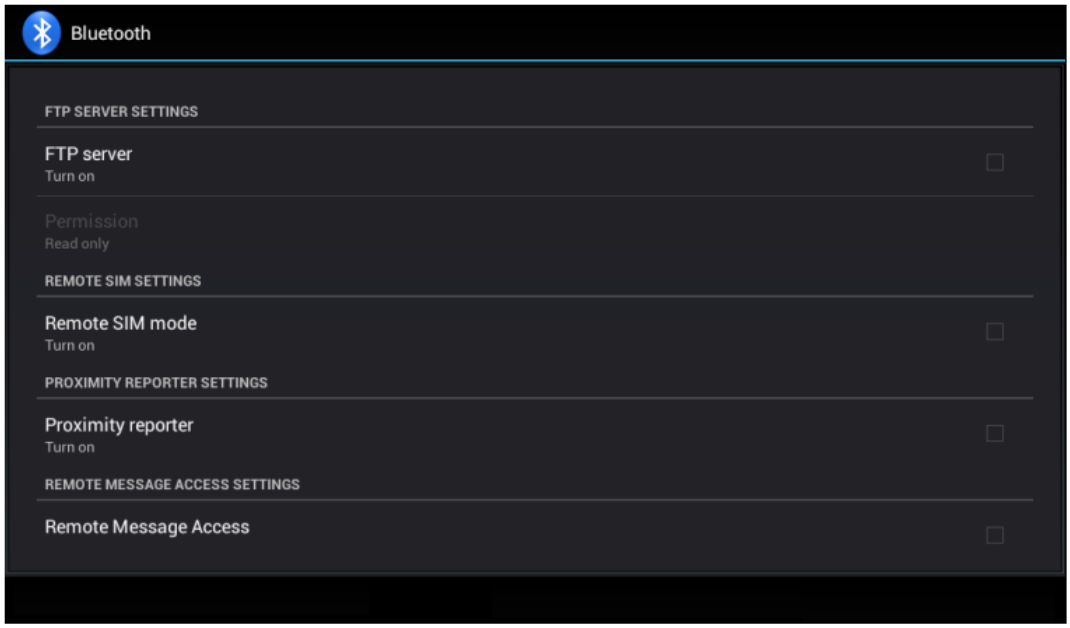

Picture 3.14

5. File transmission

Open file transmission service, Connect Bluetooth FTP and customer device to visit and operate the file.

6. Bluetooth distance induction device

Open Bluetooth distance induction device, when two Bluetooth devices distance is quite far or connection is cut off, the Bluetooth will remind you with sound.

3.4 Data Usage

Check SIM card data usage, **as Picture 3.15**

Picture 3.15

Check WI-FI data usage

Click icon in right top of **Picture 3.15**, click **Data Usage**, **as Picture 3.16**

Picture 3.16

3.5 More

3.5-1 Airplane Mode

Airplane Mode can turn off WIFI and GSM card function quickly, when airplane mode is turned on, WIFI and GSM can't get any signal, then airplane mode is turned off, WIFI and GSM module will recover to previous state.

3.5-2 VPN

Open VPN, click **add VPN network**, as Picture 4.17. Input **name** and server address, then save.

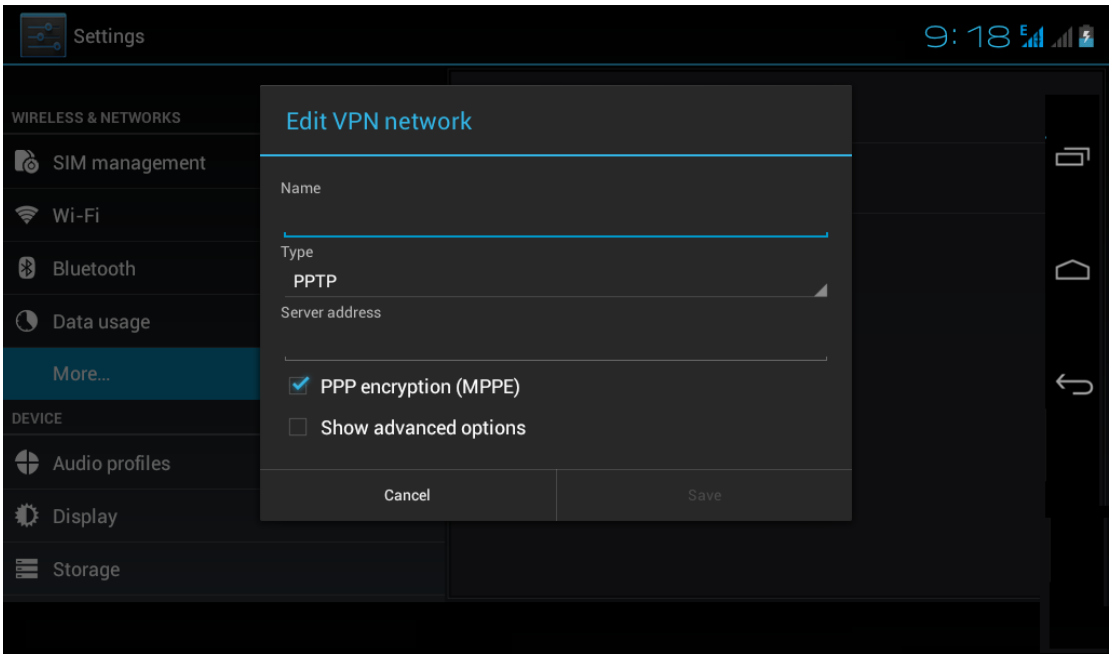

Picture 3.17

Click VPN, **as Picture 3.18**, input VPN user name and password, click connect.

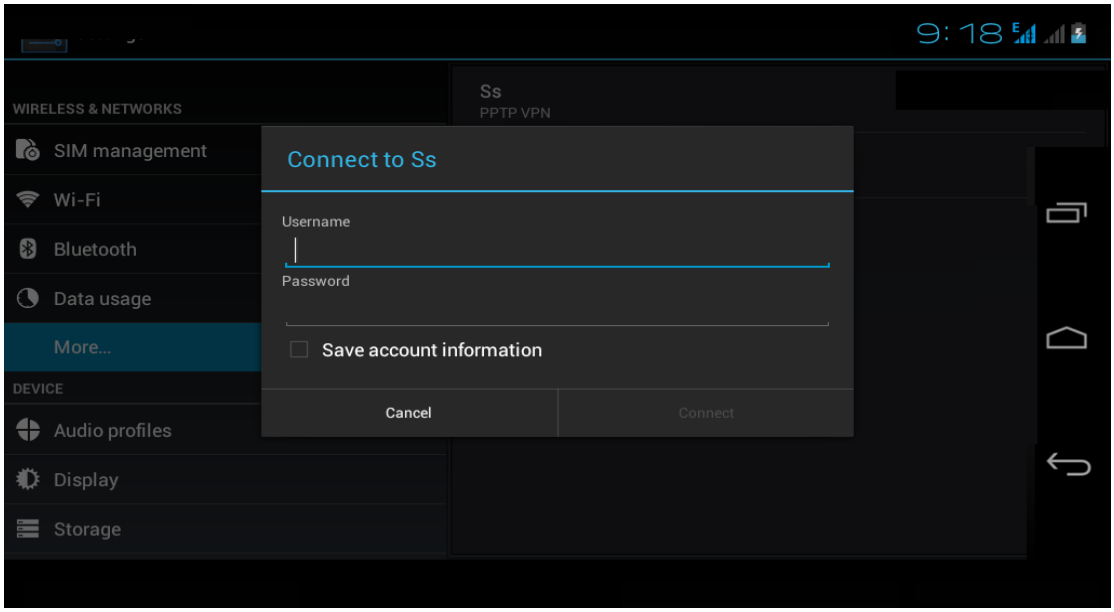

Picture 3.18

3.5-3 Network sharing and portable hotspots

Portable WI-FI hotspots

1. Click setting application in main menu.

2. Click more when Wi-Fi is well connected, open network share and portable hotspot

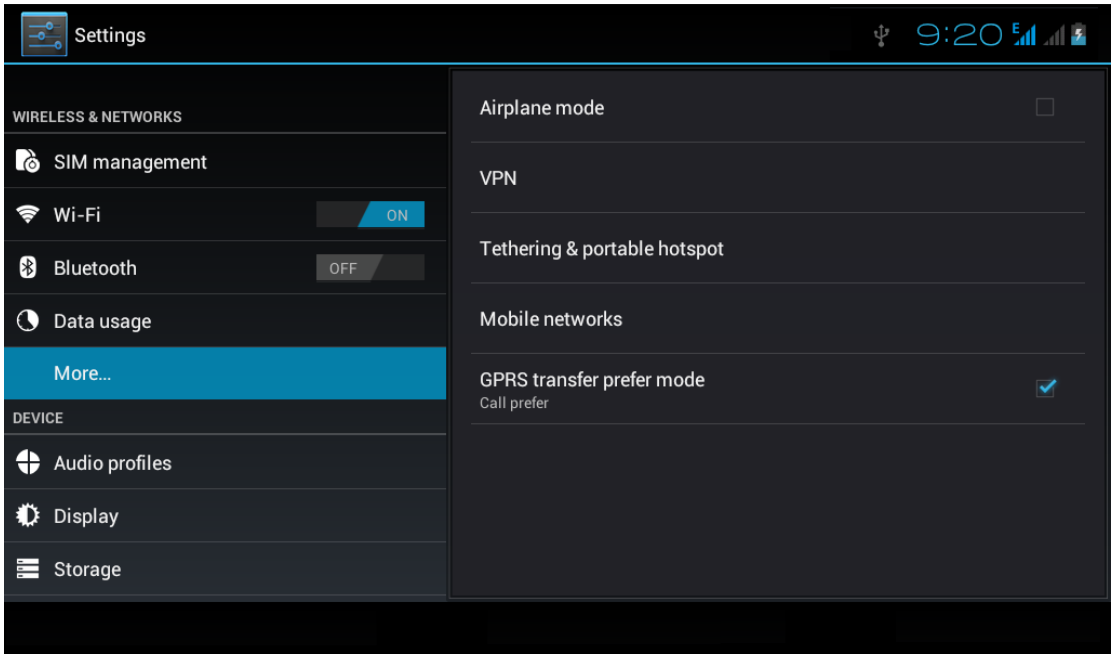

Picture 3.19

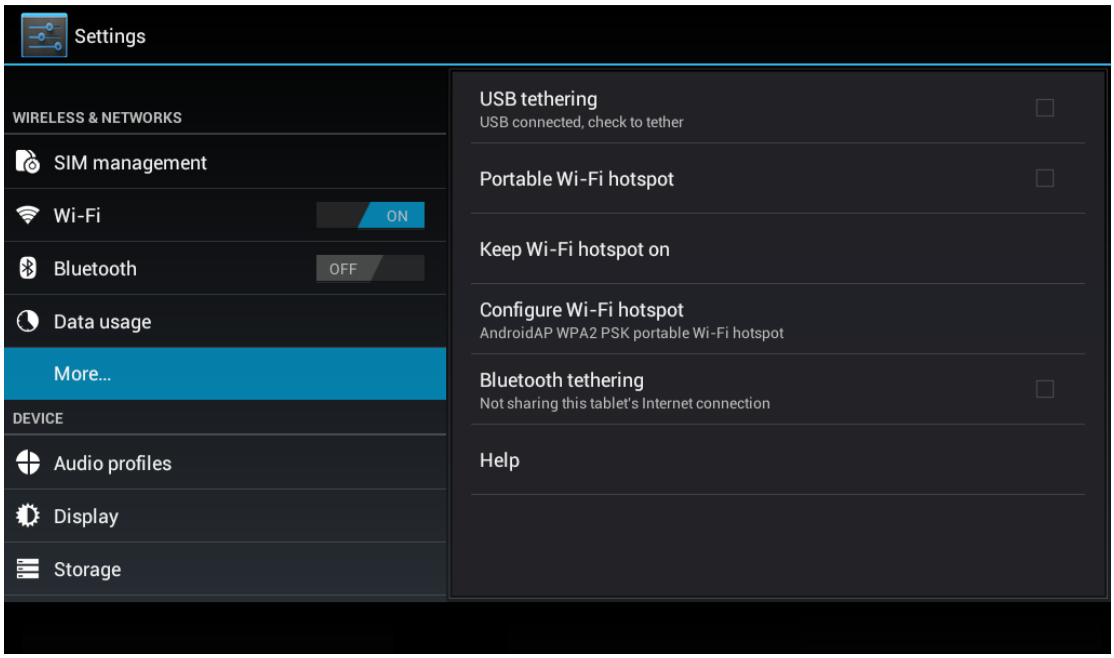

Picture 3.20

3. Click **keep WI-FI hotspots on**, choose open time.

4. Return to previous menu, open portable WLAN hotspots, click configures WI-FI hotspots.

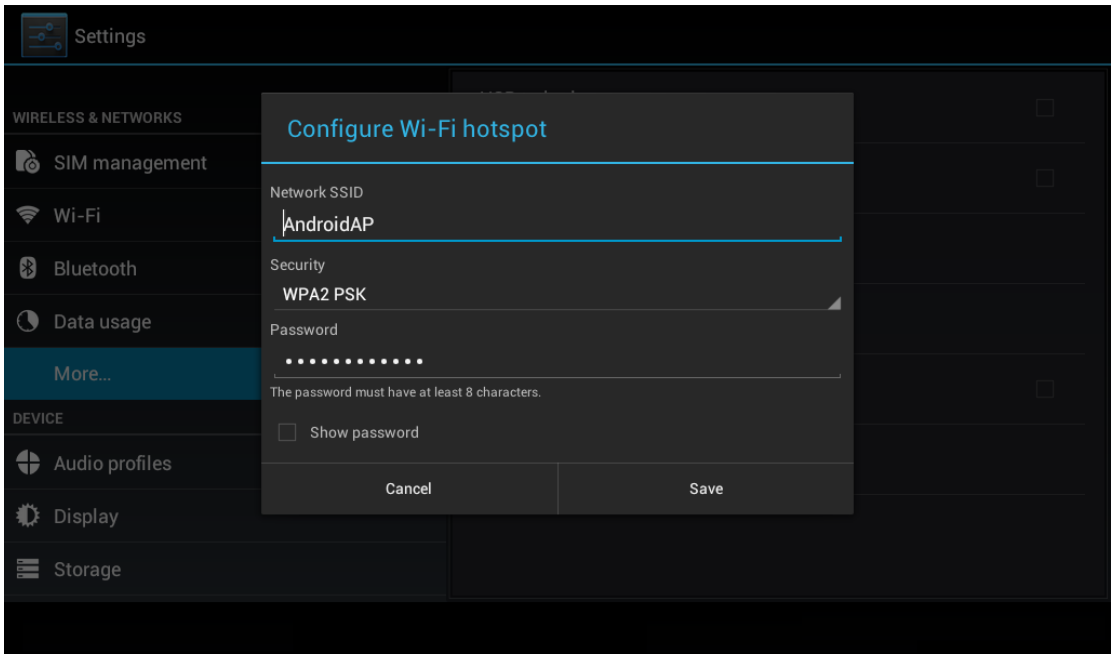

Picture 3.21

4. Set passwords you want to, password should be more than 8 numbers.

3.5-4 Mobile Networks

1. 3G service

Click 3G service, **as Picture 3.22**, choose available defaulted SIM card, GSM is 2G network, and WCDMA is 3G network.

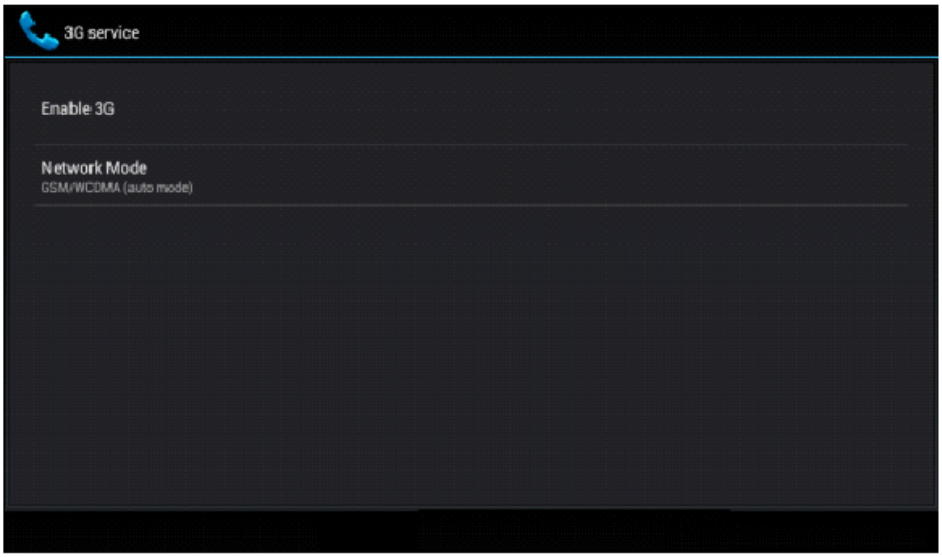

Picture 3.22

2. Access Point Name(APN)

Click mobile network, **as Picture 3.23**

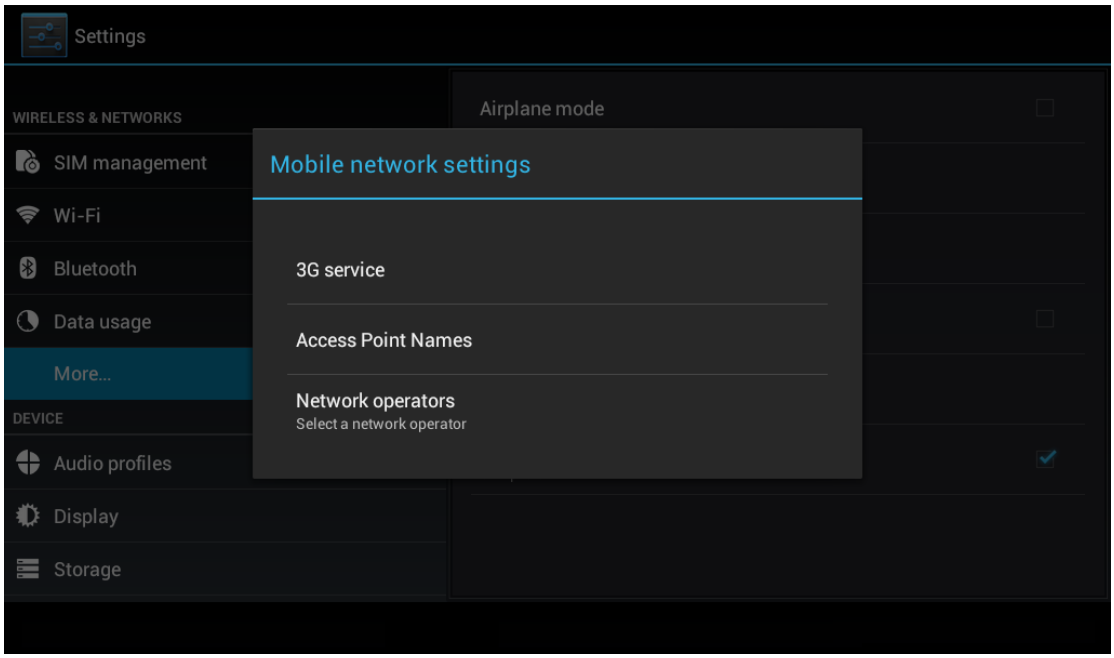

Picture 3.23

Choose access points name (APN), choose SIM card you need to connect, Choose connect type, **as Picture 3.24**

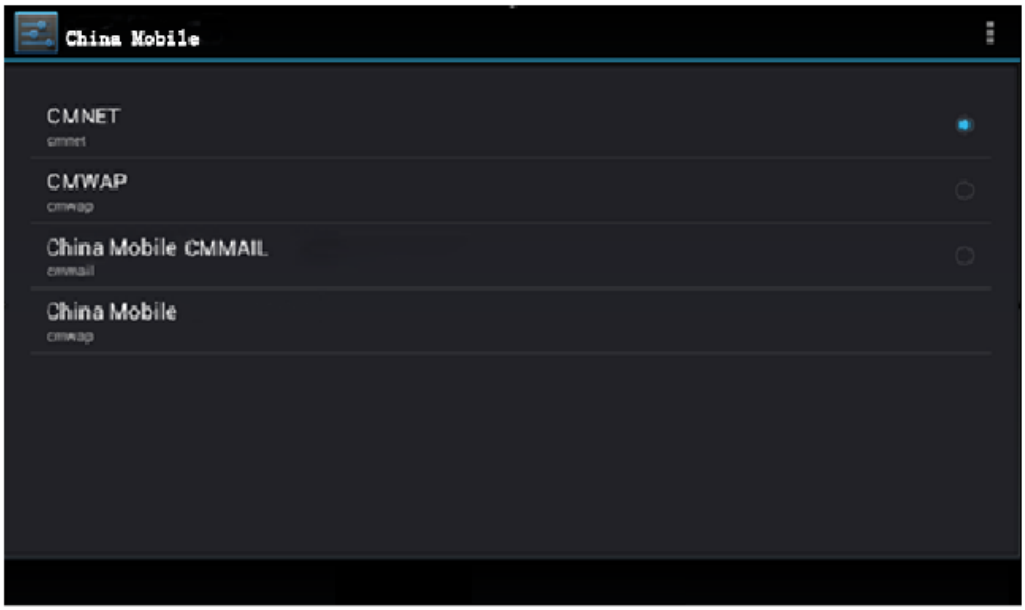

Picture 3.24

Remark: (CMWAP transmitters data through GPRS, the webpage it visit belongs to wap webpage, and CMNET support www browse mobile phone network, it can also log in webpage in computer. And the charges are also different.)

3. Network Operator

Click network operator, choose SIM card you need to connect, system will search available GSM and WCDMA network**, as Picture 3.25**

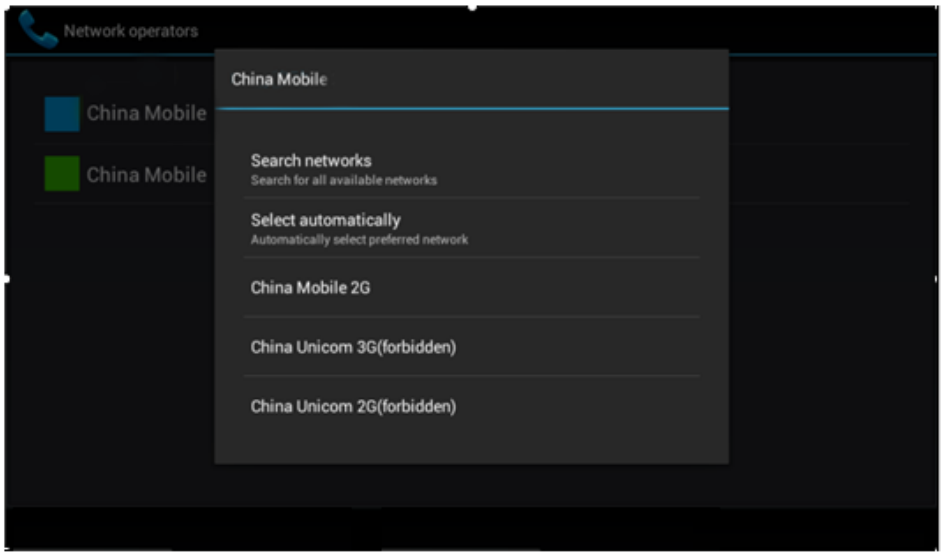

Picture 3.25

3.5-5 GPRS data prior mode
After Open GPRS data prior mode, systems will priority chooses your network.

3.6 Contextual Model

1. Open settings, click contextual model, **as Picture 3.26,**

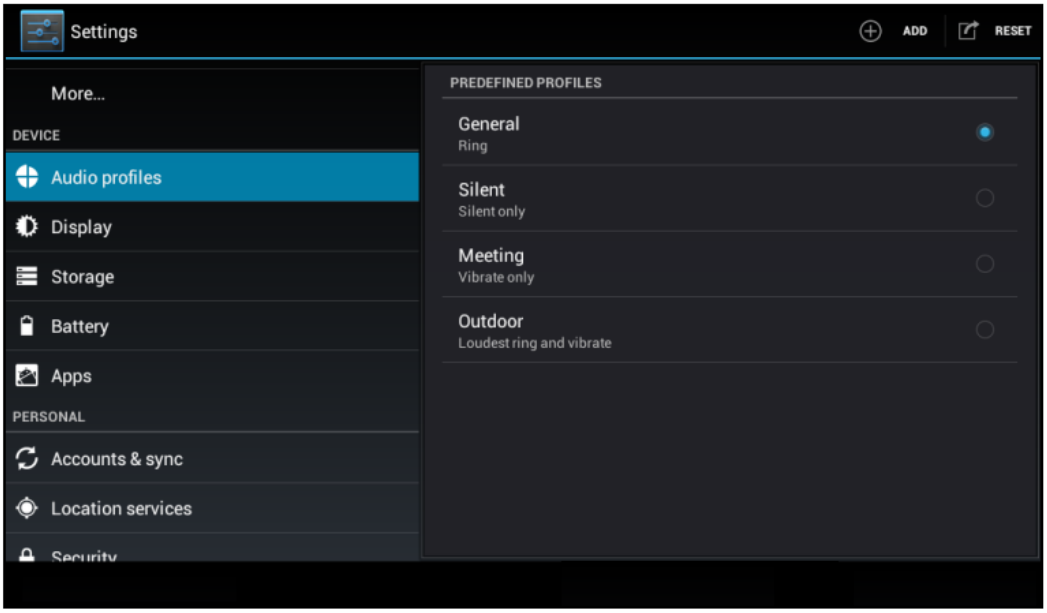

Picture 3.26

2. Click **standard** to enter into **Picture 3.27**

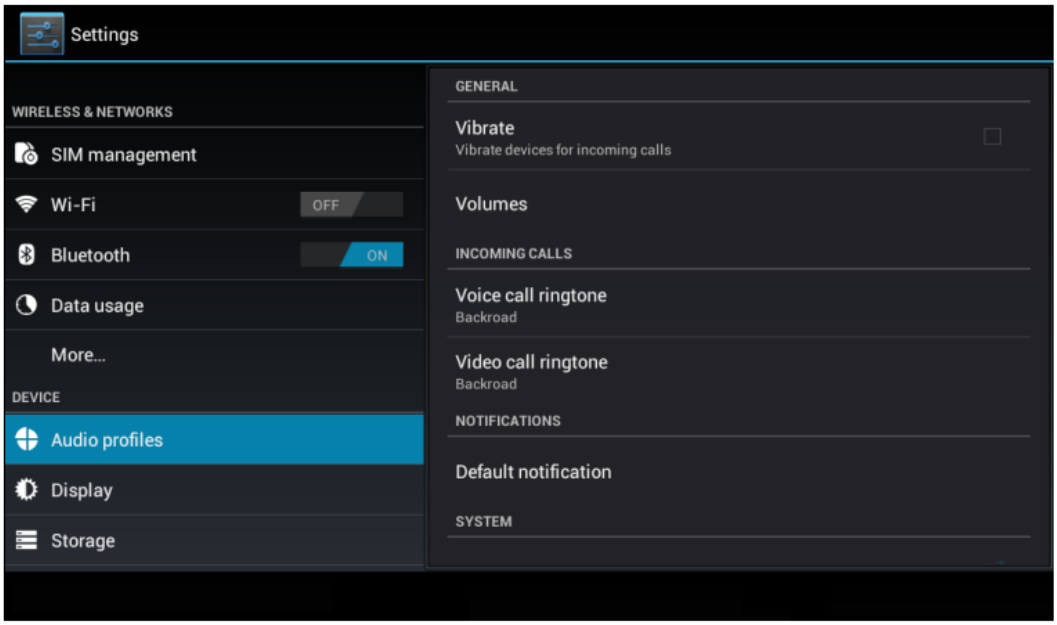

Picture 3.27

1. Vibrate

In picture 3.27, click**s vibrate,** TABLET will vibrate when someone calls you.

2. Volume

In picture 3.27, click volume, you can set ringtone, notice, and alarm volume, as Picture 3.28

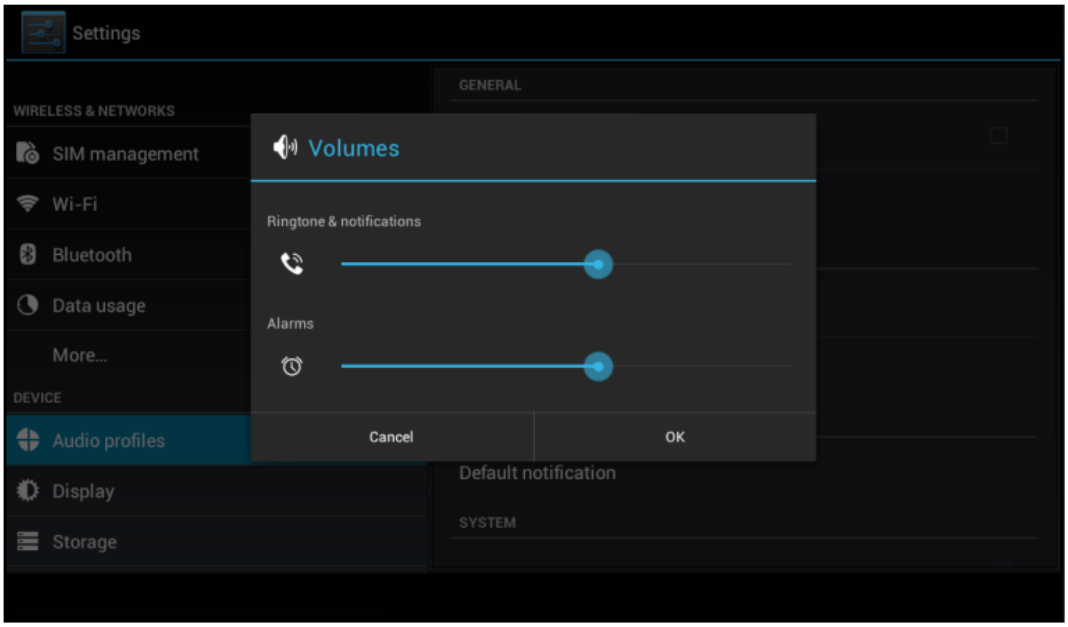

Picture 3.28

3. Voice call Ringtone

In **picture 3.27**, click **voice call ringtone** to choose voice call ringtone, **as Picture 3.29**

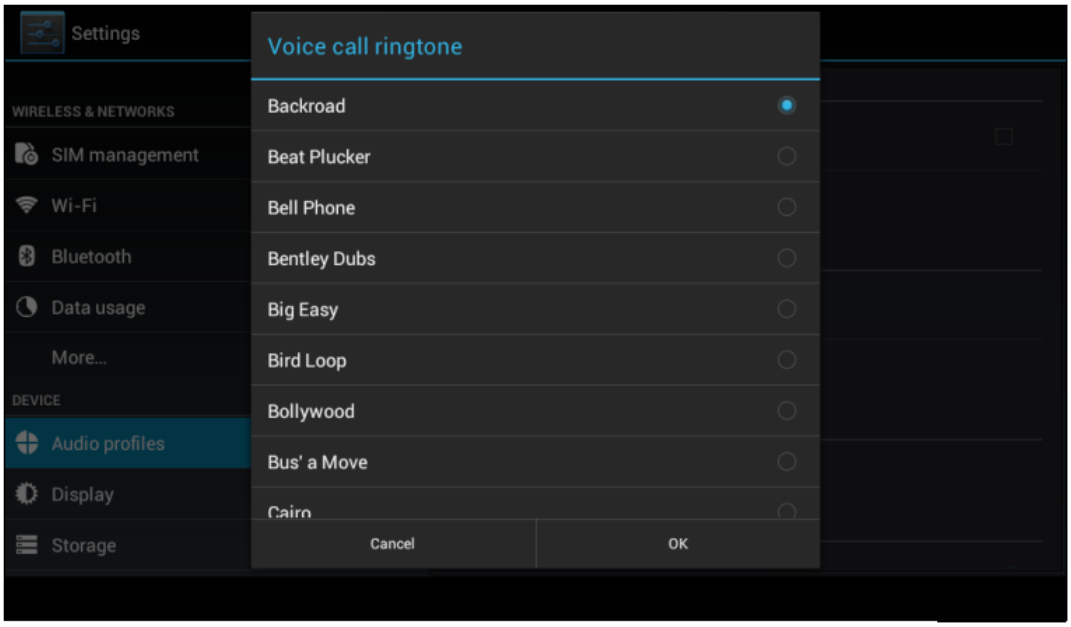

Picture 3.29

4. Video call ringtone

In **Picture 3.27**, click video call ringtone to choose video call ringtone, **as Picture 3.30**

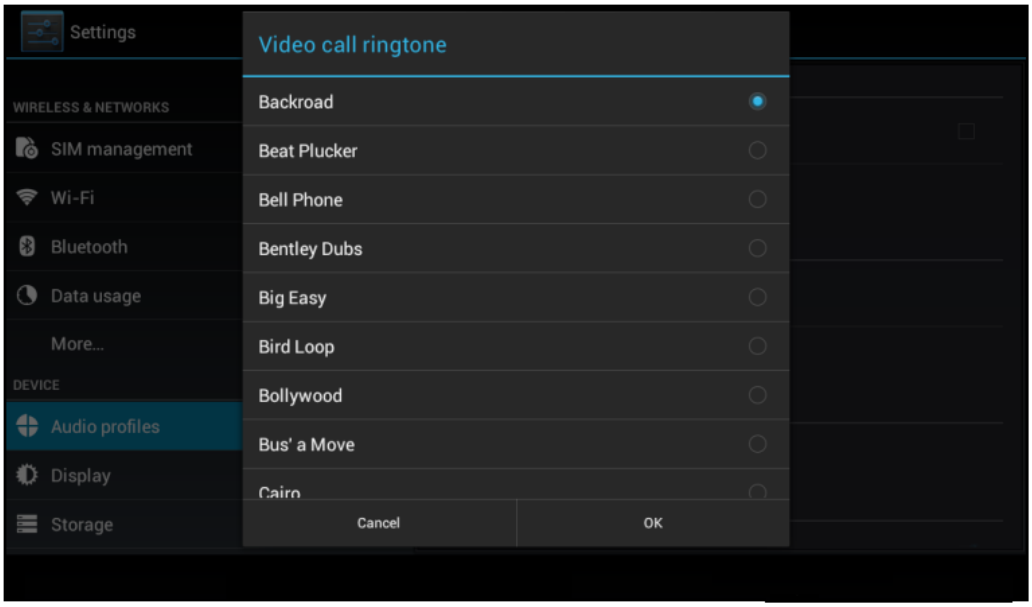

Picture 3.30

(Note: Except standard, silent, meet, outdoor are only for selection, they can't be set.)

3.7 Display

3.7-1 Adjust the screen brightness

1. Click **Setting** application procedure.

2. Click **display**, choose brightness,

3. Drag the portlito to adjust the brightness volume.As Picture 4.31

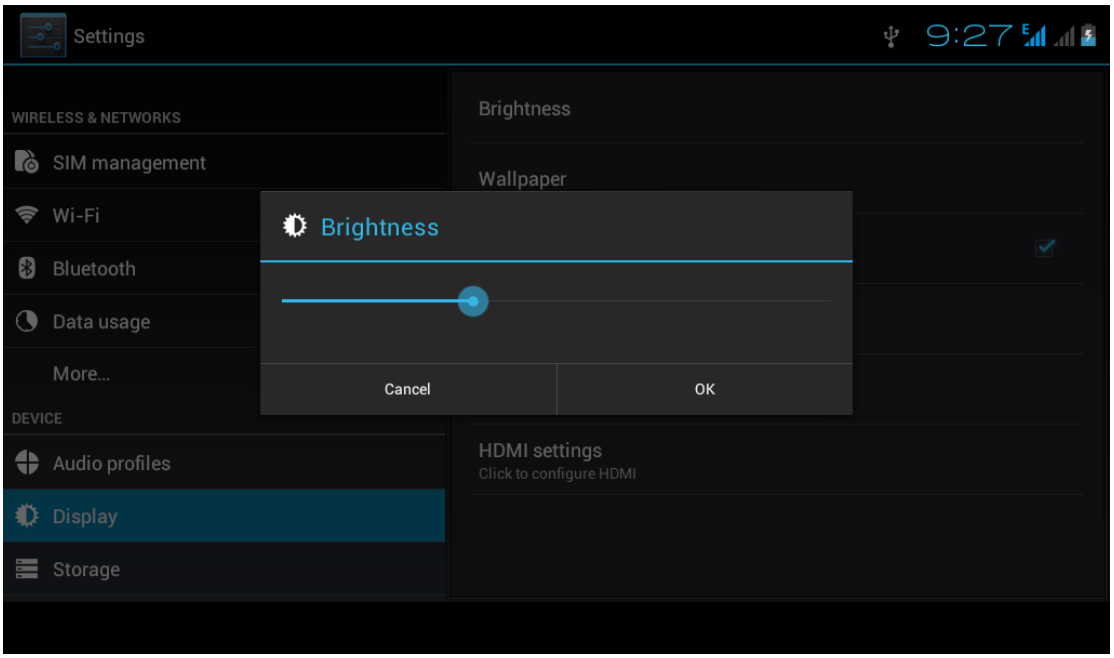

Picture 3.31

4. Click OK after brightness is adjusted.

3.7-2 Wallpapers

1. Click **setting** application**.**

2. Click **display,** click **wallpaper.**

3. You can choose different wallpapers as you like—live wallpapers---gallery(user defined)---wallpapers (system defect)---video wallpaper, **as Picture 3.32**

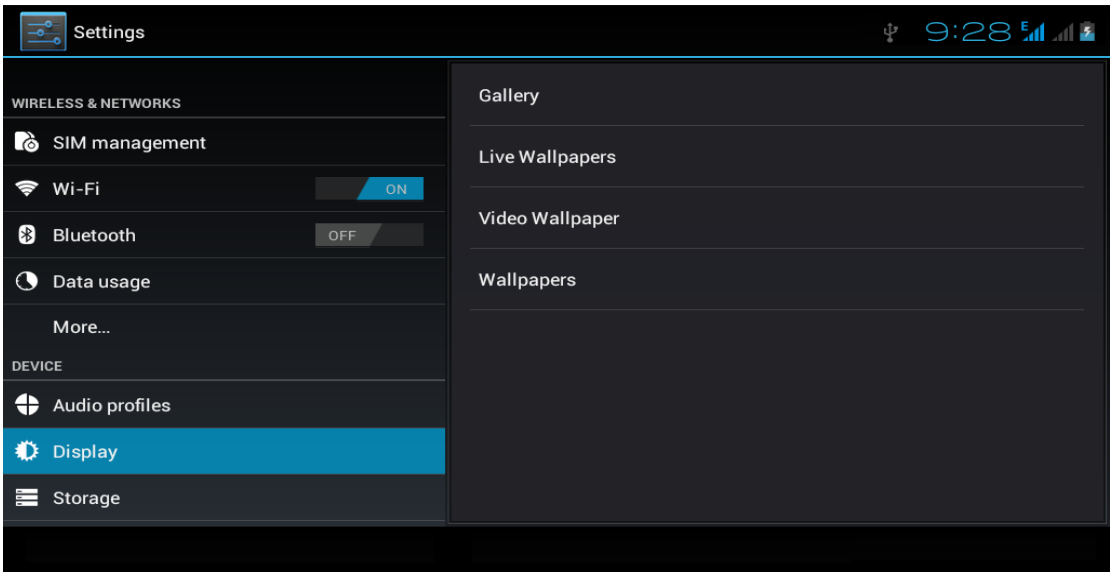

Picture 3.32

3.7-3 Auto rotation

System is defaulted as open auto rotation, when it is turned off, system won't rotate TABLET screen by G-sensor.

3.7-4 Sleep

1. Click setting appliation.
2. Click display.
3. Click sleep.
4. Set the sleep time as you want, **as Picture 3.33**

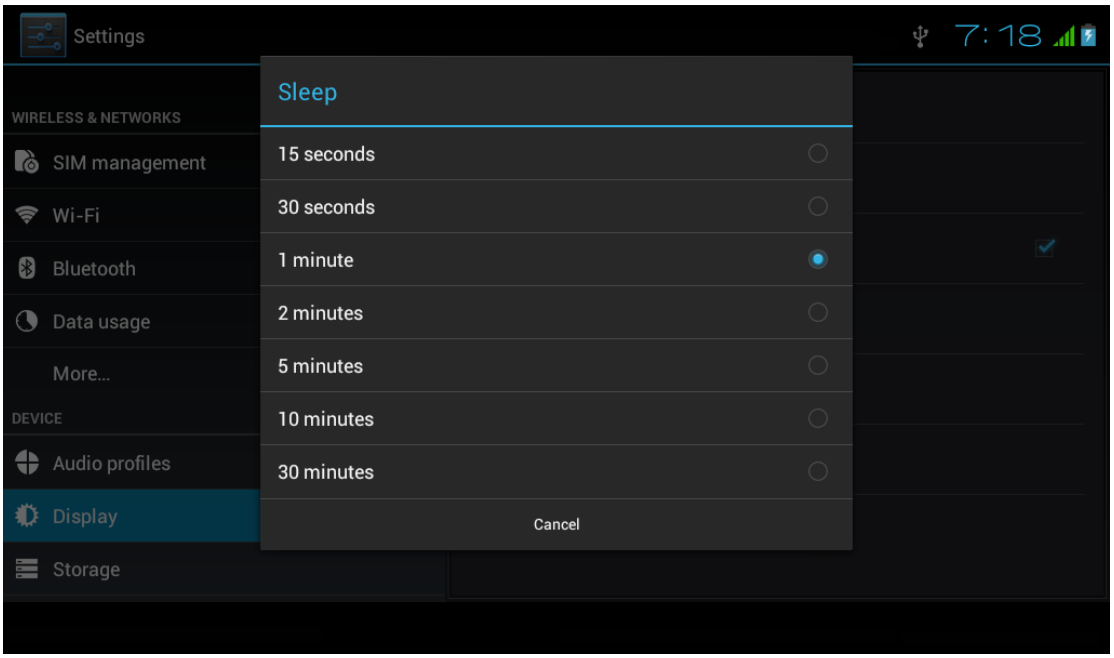

Picture 3.33

3.7-5 Font size

Click **font size** to adjust the font size, **as Picture 3.34**

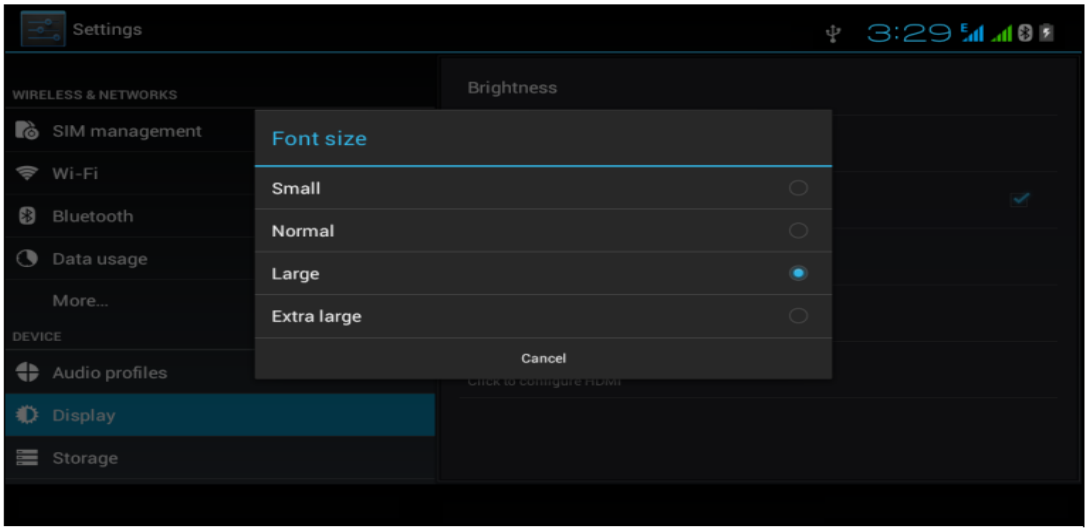

Picture 3.34

3.7-6 TV-OUT setting

1. Use HDMI connector, in the right bottom of TABLET, it will remind HDMI connector is connected.

2. Click HDMI setting, **as Picture 3.35**

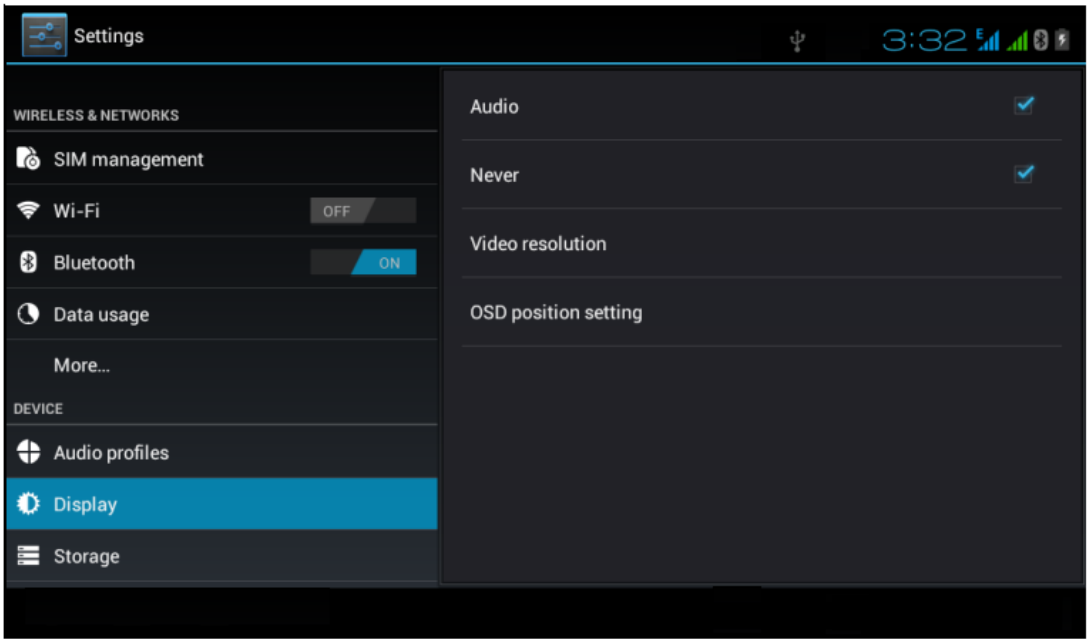

Picture 3.35

(1) Audio

Open audio to realize HDMI audio output.

(2) Never

Click never, TABLET will never sleep.

(3) Video Resolution

Click video resolution to adjust reslution, **as Picture 3.36**

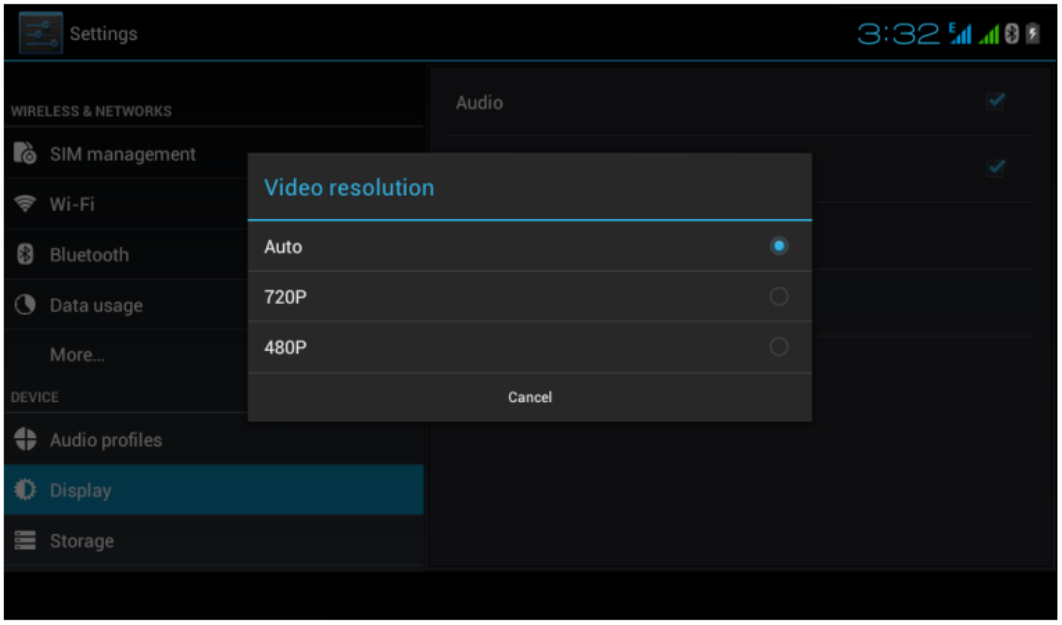

Picture 3.36

3.7-7 OSD postion setting

Click **OSD position setting,** TABLET will adjust OSD position setting, as Picture 4.37

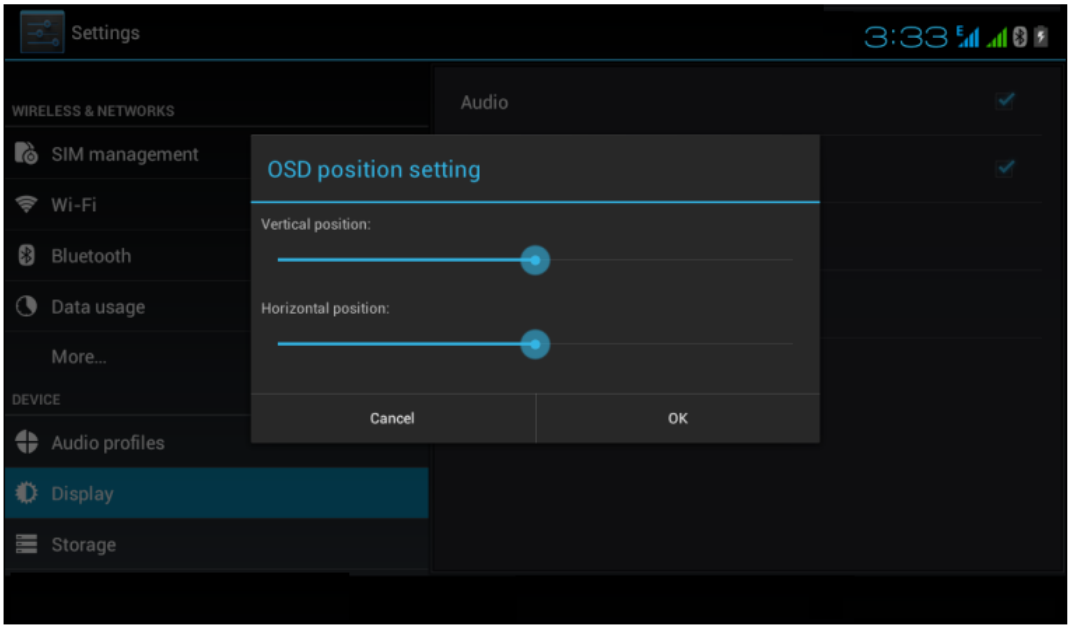

Picture 3.37

3.8 Storage

Open setting function, click memory, click **preferred install location,** you can choose isntall new application to choose preferred install location.

Check SD card and TABLET storage space.

1. Enter into setting application.

2. Click storage, check storage space.

3. Internal storage

(1)System storage

System storage is the spcae TABLET leave for system file, **as Picture 3.38.** it can't be viewed.

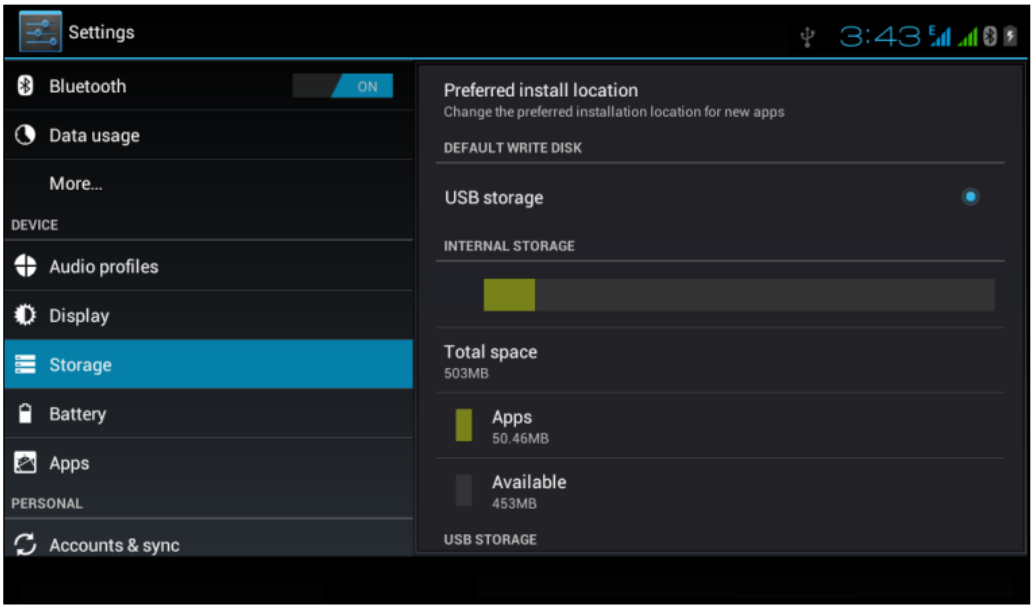

Picture 3.38

(2)Internal storage

Internal storage is TABLET local NAND storage, **as Picture 3.39**, if you need to check the storage content, you can check it in main menu.

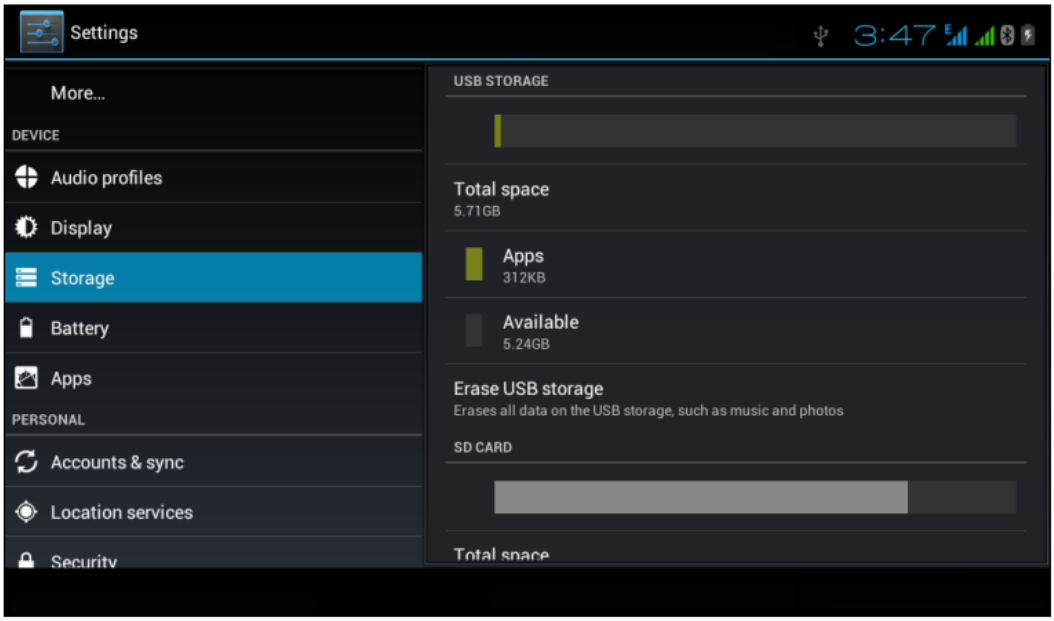

Picture 3.39

SD card

You can check storage space, SD card available space, unmount SD card and erease SD card, **as Picture 3.40**

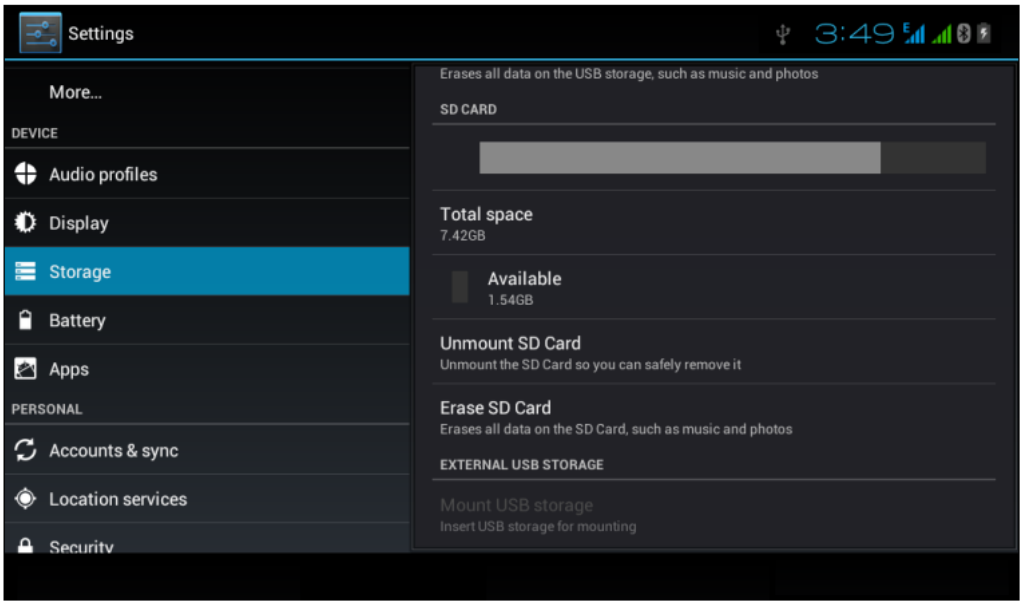

Picture 3.40

Safely remove SD card

1. Click setting application.
2. Click memory.
3. Click uninstall SD card.

4. Now you can remove SD card safely.

Note: Removing SD card safely can protect SD card and increase its lifetime.

3.9 Battery

Click setting function, select battery, you can view the battery situation, **as Picture 3.41**

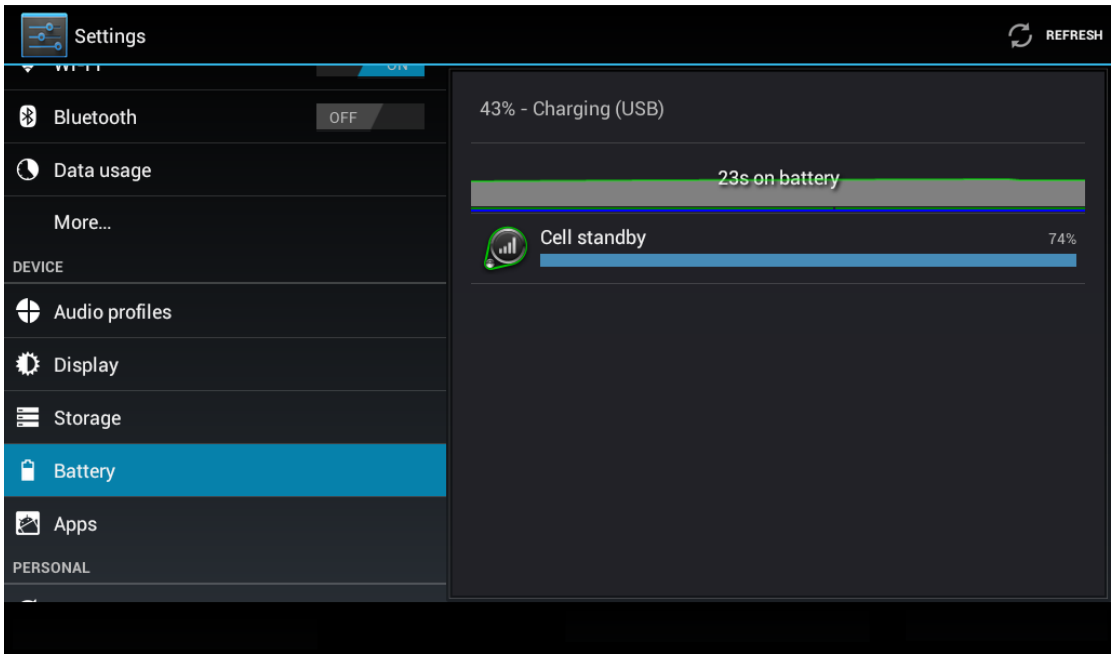

Picture 3.41

3.10 Application program

1. Click setting application in Apps.

2. Select application, after enter, you can manage and delete installed application and check system used storage space and left space. (**As Picture 3.42**)

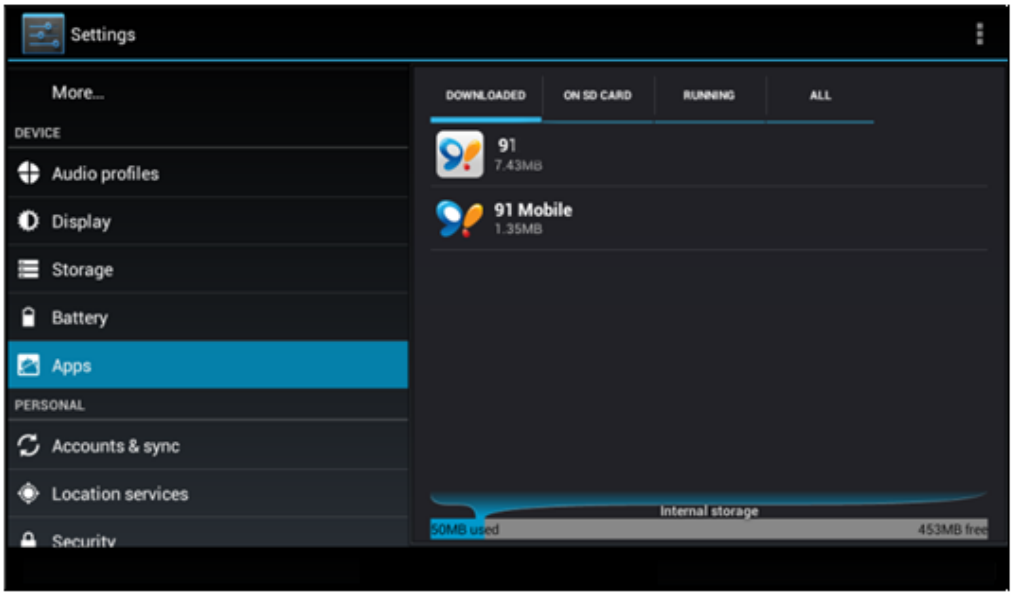

Picture 3.42

1. View internal storage used space and left space, as Picture 3.43

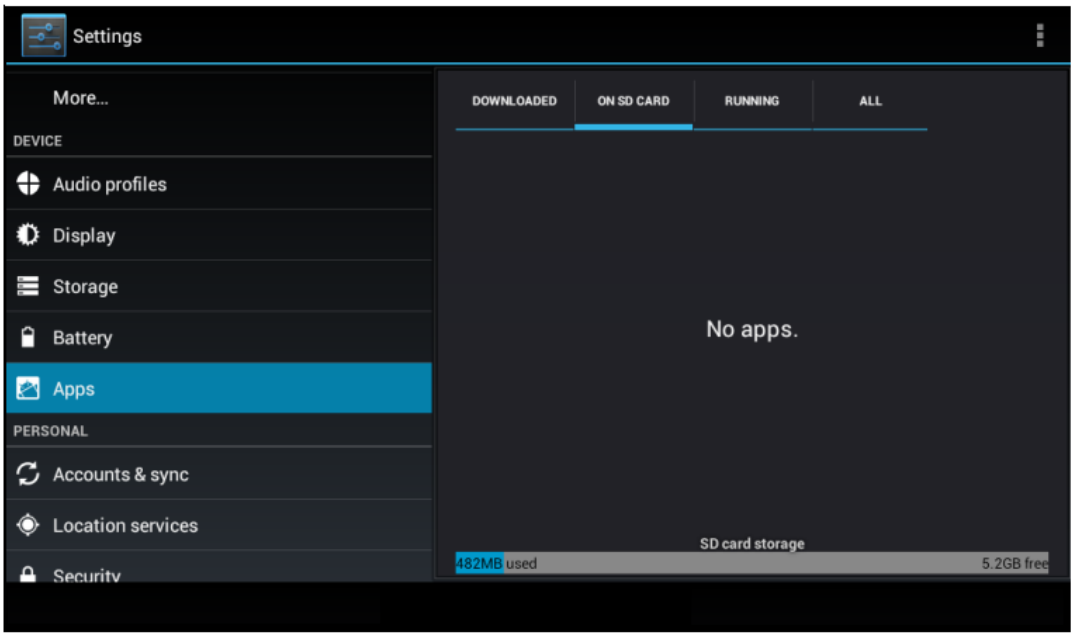

Picture 3.43

1. View the working device, used space and available space, **as Picture 3.44**

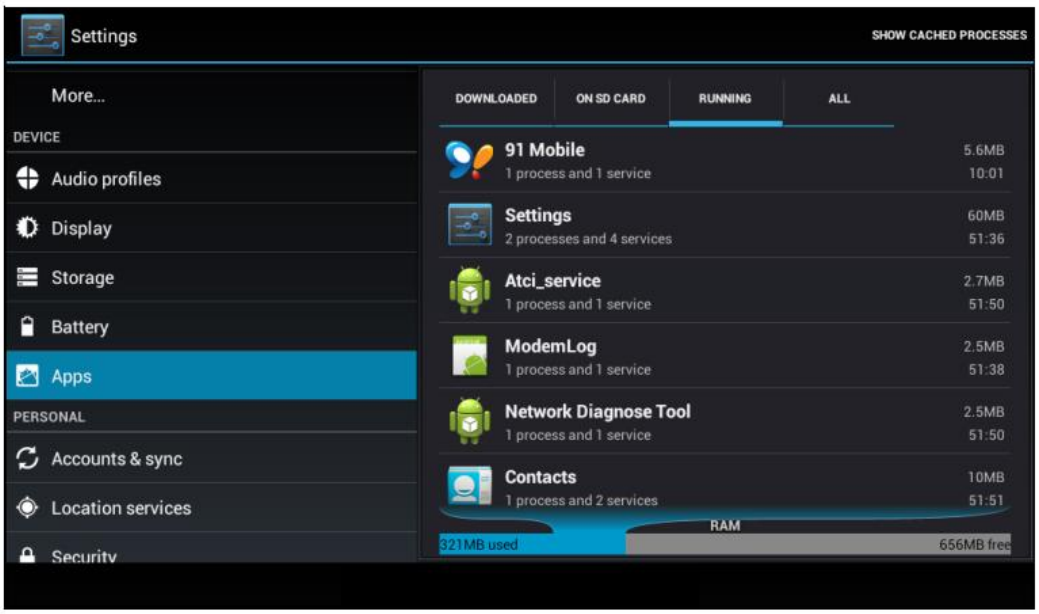

Picture 3.44

3.11 Account and Sync

1. Select setting application
2. Open account and sync, **as Picture 3.45**

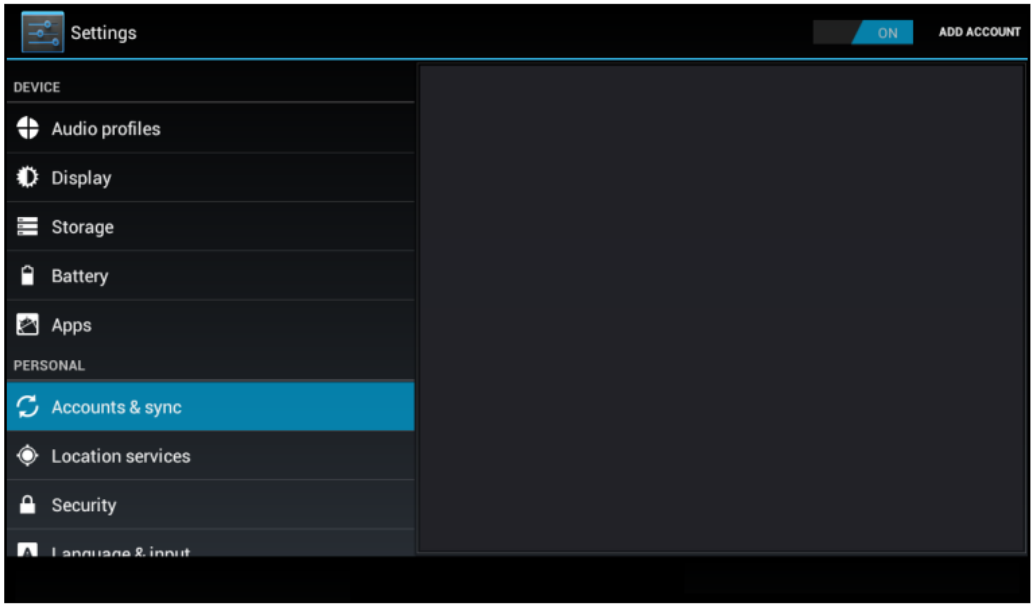

Picture 3.45

3. Click **add an account, as Picture 3.46**

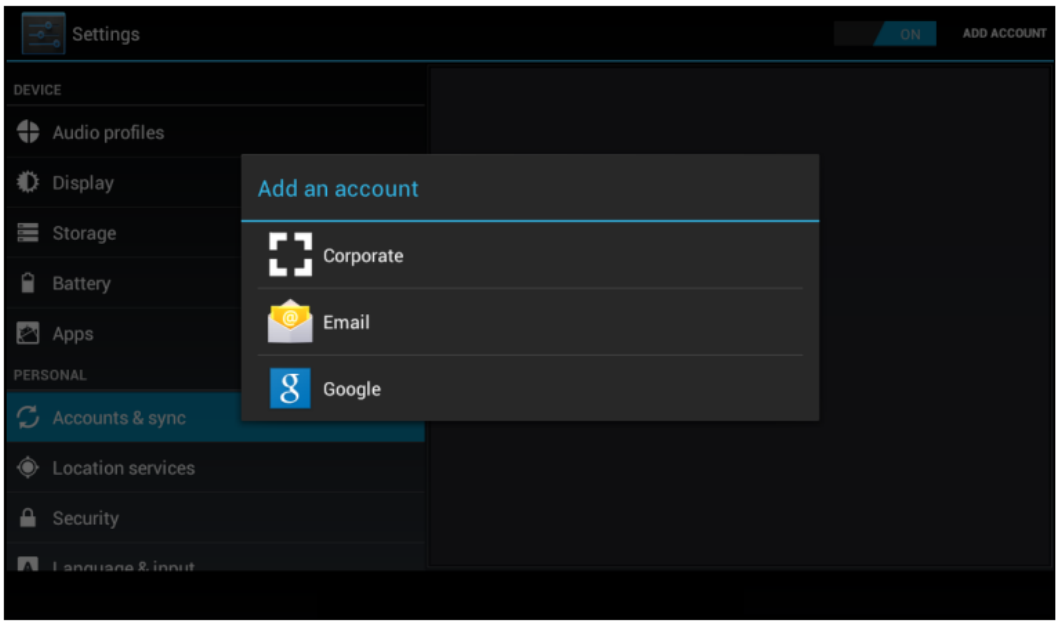

Picture 3.46

4. After successfully load, it will open the sync function, **as Picture 3.47**

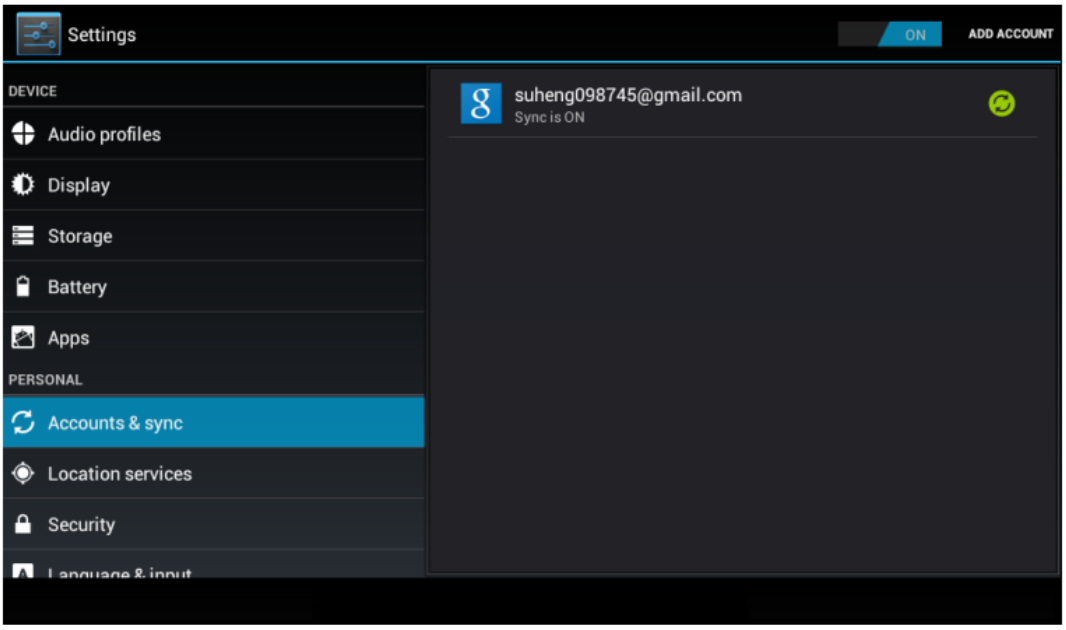

Picture 3.47

3.12 Location service

Click **setting**, select **location service**, **as Picture 3.48**

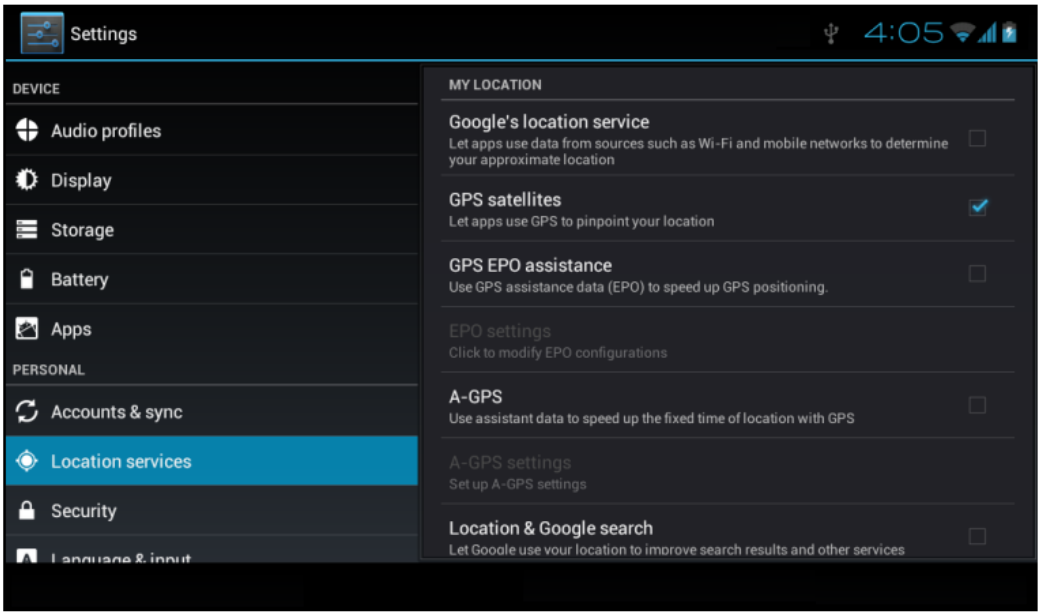

Picture 4.48

1. Google's location service

Open Google location service, you can use WIFI to positioning TABLET.

2. GPS satellites

Open GPS satellite, you can use GPS to positioning TABLET.

3. GPS Assistance

Open GPS Assistance, it can insrease the speed of GPS positioning, but you need to insert SIM card and use data transimission.

4. EPO setting

Click EPO setting, enter into **Picture 3.46**, then check if EPO positioning information and EPO has turned on auto download.

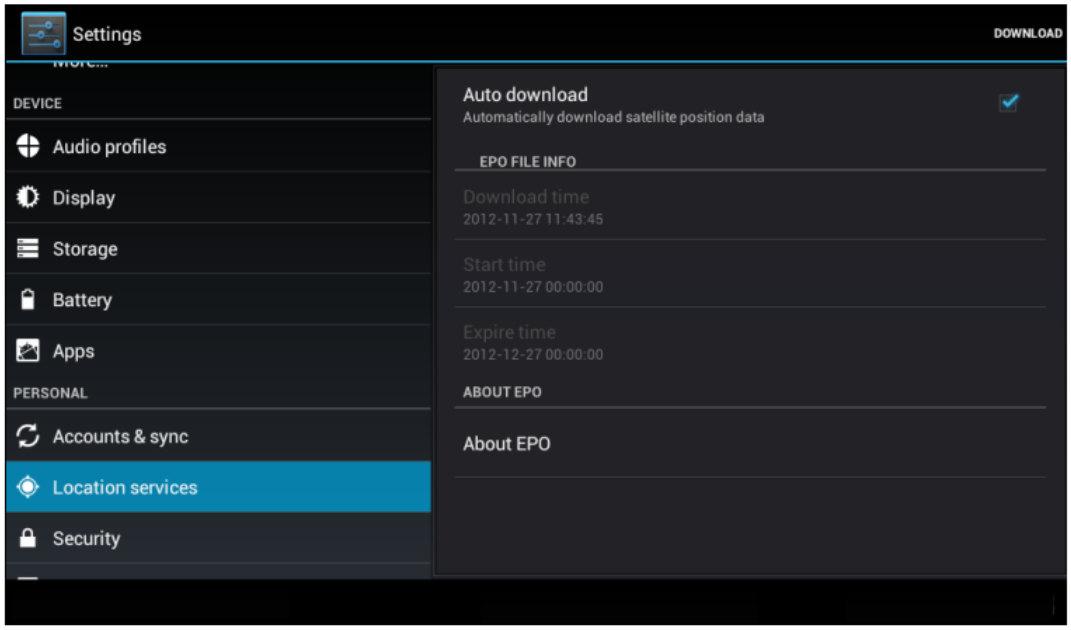

Picture 3.49

5. A-GPS

After opening A-GPS, you can inscease positioning speed through network.

6. A-GPS settings

Click A-GPS setting, enter into **Picture 3.50**

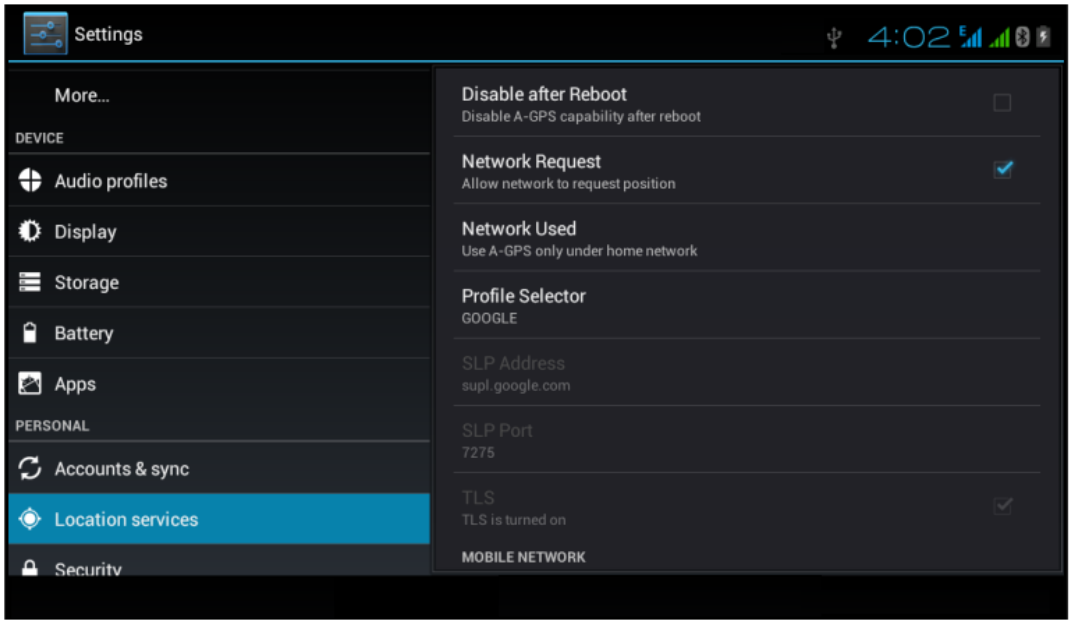

Picture 3.50

7. Disable after reboot

Click disable after reboot, when you reboot your TABLET, A-GPS will auto turn

off.

8. Network Request

Click network request, TABLET can get your location through network.

9. Network used

Open network used, you can choose network type, **as Picture 3.51**

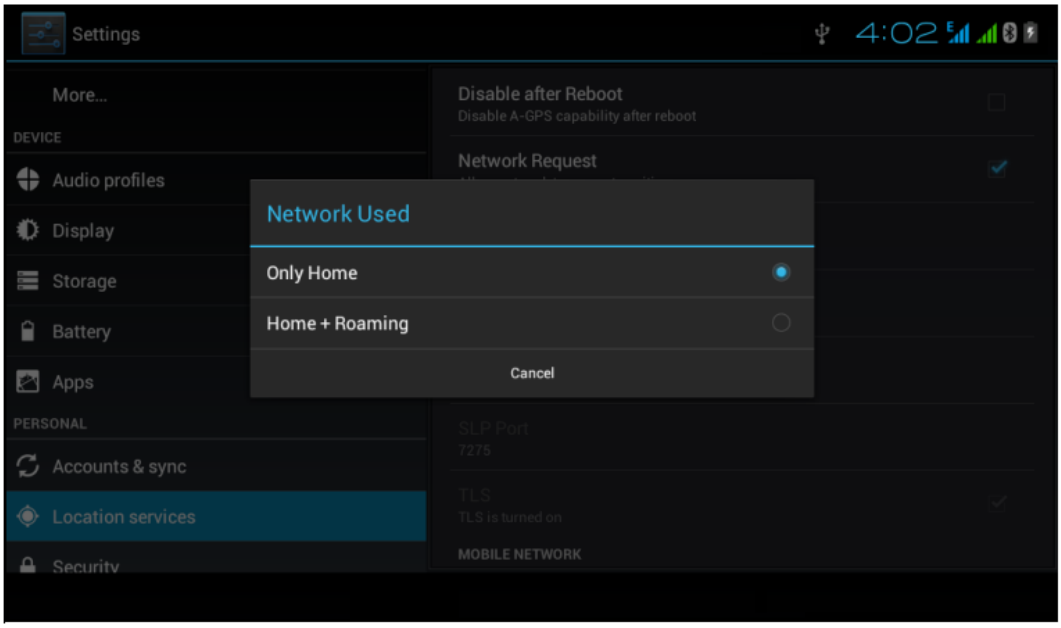

Picture 3.51

10. Server

Click server, it can switch location service, **as Picture 3.52.**

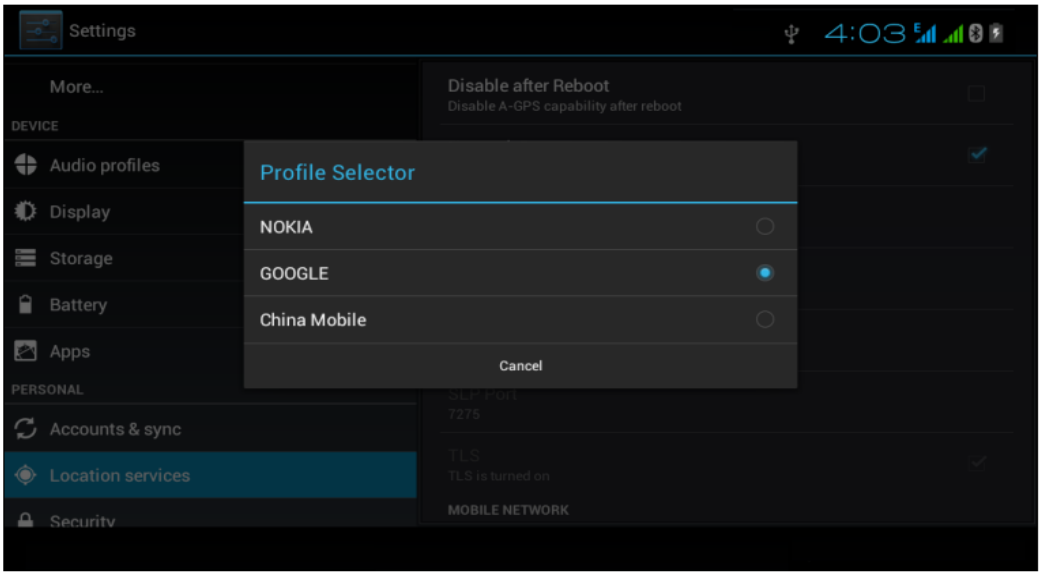

Picture 3.52

11. Location and Google search

Open location and allow google search, you can use your location information to improve search result and other services.

3.13 Safety setting

Set locked screen

Lock the touch screen by unlock icon or password to protect your Tablet.

Note: After setting screen locked, you should enter the passcode each time when you startup or screen is locked

Set unlocked picture

1. Click setting application in main interface.
2. Click **safe**.
3. Click **locked the screen**.
4. Choose **picture** in text setting area.
5. Click next following the remind message.
6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. **As Picture 3.10**, move your finger from the screen when finish. The system will record yous new unlock pattern.
7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.

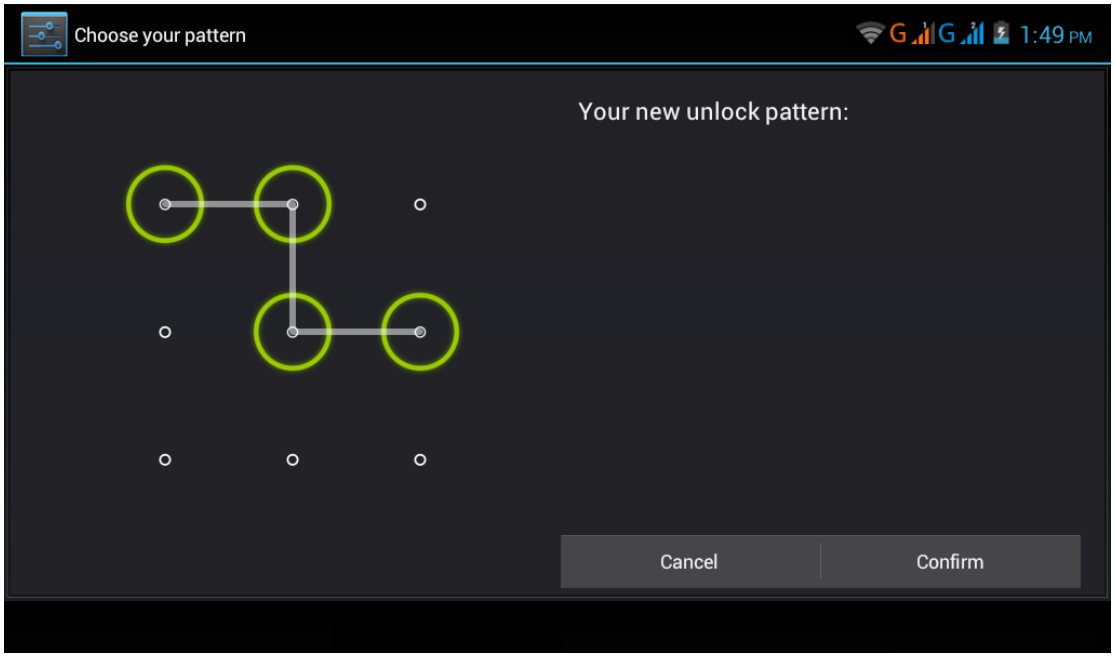

Picture 3.53

Set unlock PIN code

1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **screen locked.**
4. Choose **PIN** in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Ener new PIN code again and click **confirm**.

Set unlock password

1. Click **setting application** in main interface.
2. Click safe.
3. Click screen locked.
4. Set password in text seting area.
5. Set new password(letters and numbers) and then click continue.
6. Enter the password again and the click **confirm.**

Unknown source

1. In main interface, click setting.
2. Click safety.
3. Click unknown source,**as Picture 3.54**

Picture 3.54

Note: Manual installing APK files needs to turn on unknown source.

3.14 Language and Input Method

Click setting, select language and input method, choose language to switch language,

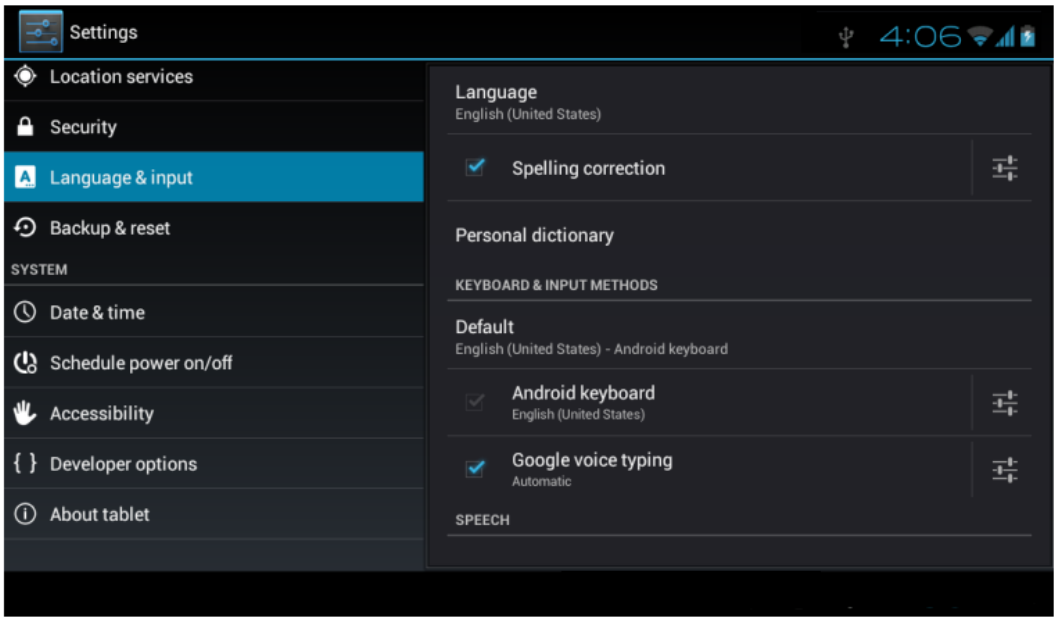

Picture 3.55

Click **setting**, choose **language and input,** choose **Android keyboard setting,** click input language, **as Picture 3.56**

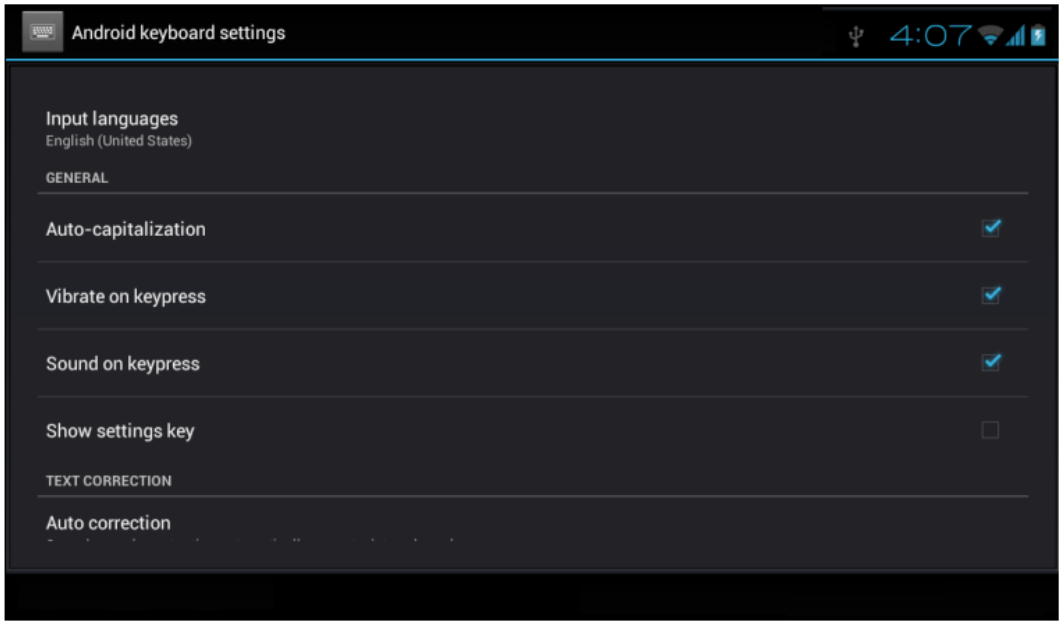

Picture 3.56

Choose the language you want to change in the language list, as Picture 3.57

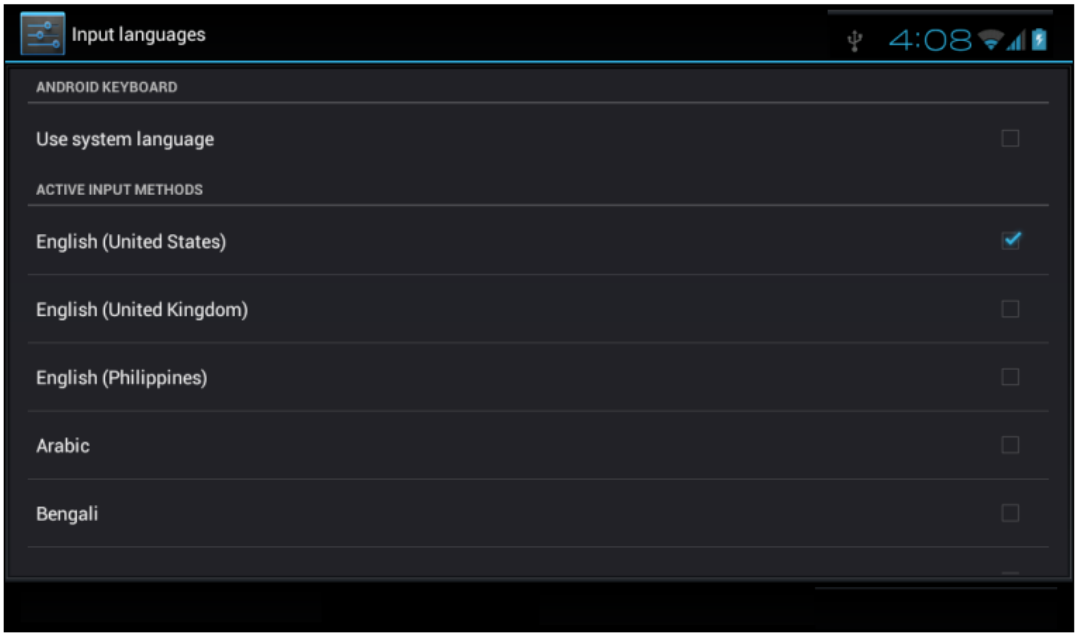

Picture 3.57

Return to **langauge and input method,** click **default,** as Picture 3.58, select input method you want to use.

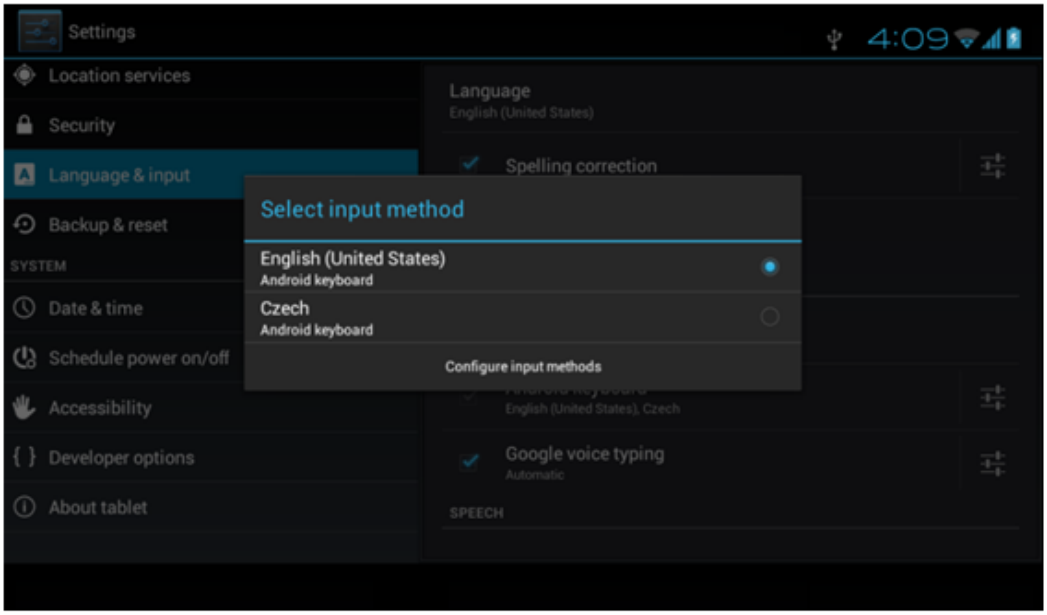

Picture 3.58

3.15 Backup and Reset

Connect Wi-Fi and login your google account, choose **backup my data**, system

will backup your data into google server.

If you need to recovery factory reset, please click reset, **as Picture 3.59**, if you need to formulate NAND, please click reset tablet.

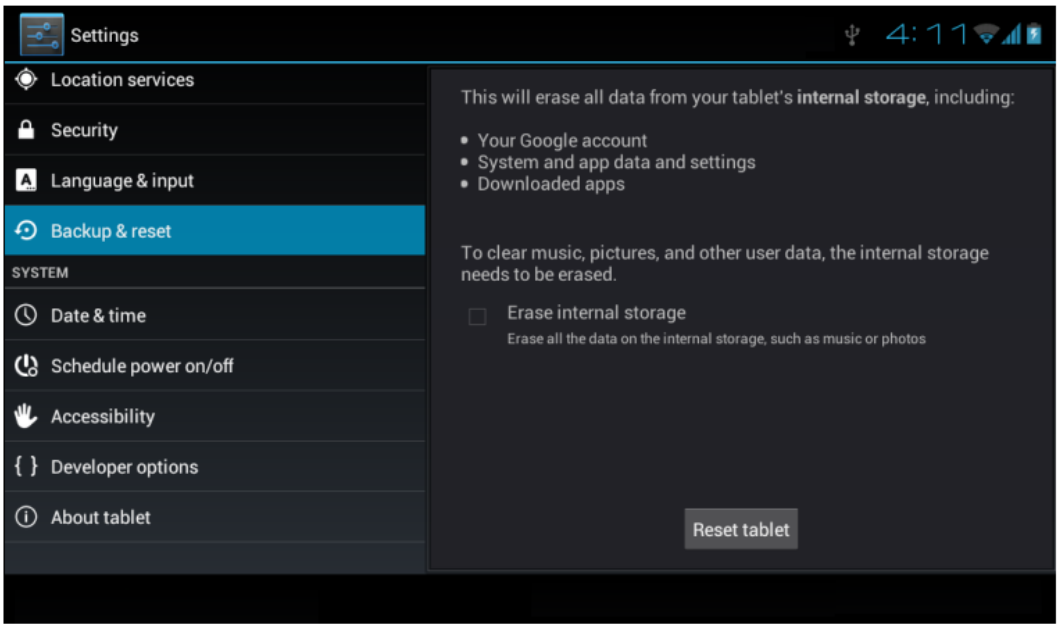

Picture 3.59

3.16 Date and Time

According to the preset, system will voluntorily apply the date, zone, and time provided by internet.

Manual set date, time and zone

1. Click Setting application procedure.

2.Slide down the screen, then click **date and time.**

3. Turn off “auto setting of date and time”.

4. Turn off “auto setting zone’.

5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.

6. Click **Date setting**, then click upper or down buton to adjust date, month, and year, click **setting** when you finish selection.

7. Click **Time setting**, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you se 24-hour format). Click **Setting** to finish.

8. Click **24-hour format**, switch between 12-hour or 24-hour formay, the time format you choose will be used on the alarm clock.

9. Click date format setting, then choose the time format you want to show on

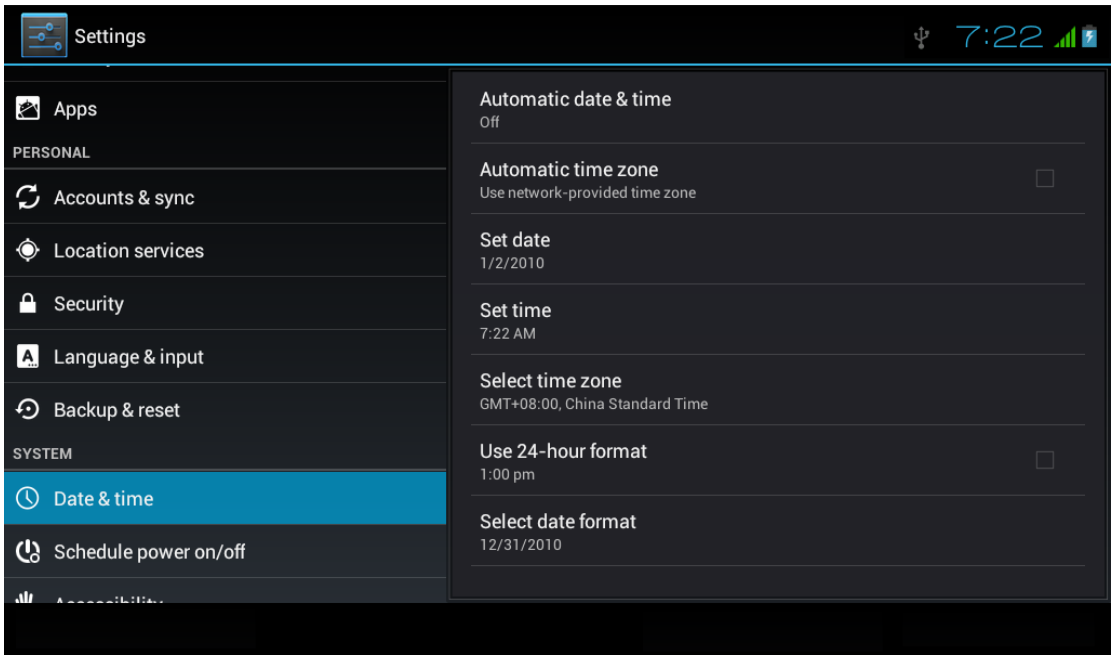

Picture 4.60

3.17 Fixed-time Startup and Shutdown

1. Click **Setting** application procedure
2. Click **fixed-tine startup and shutdown**
3. Operate as below **Picture 3.61**

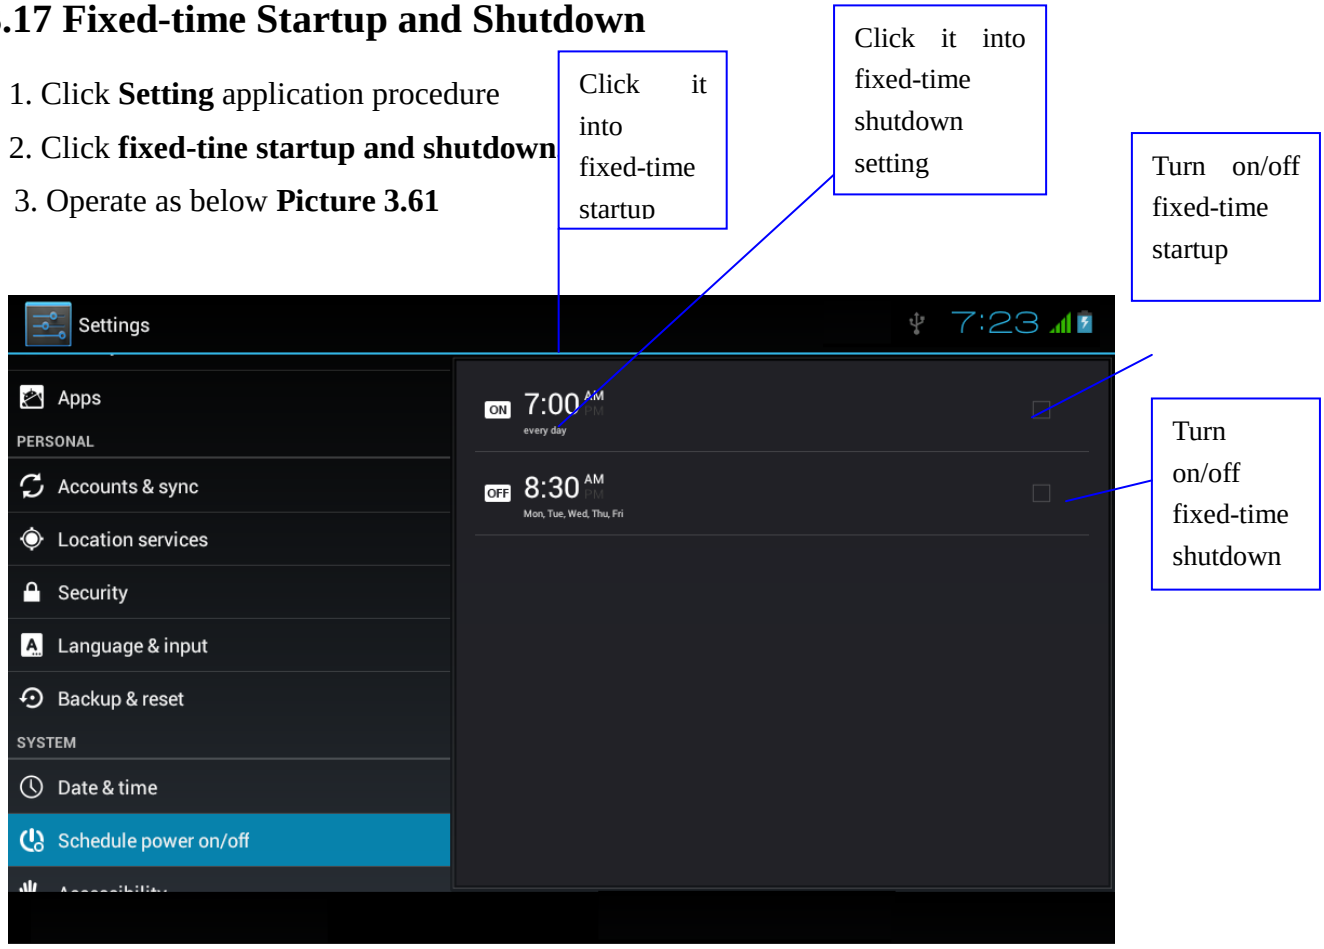

Picture 3.61

3.18 Assisstance Function

3.18-1. Large size

Click it to make system font large size

3.18-2. Click power button to end calls

When Click call, press “power” button, call will end but not hold.

3.18-3. Touch and hold delay

Click touch and hold delay to increae time, **as Picture 3.62**

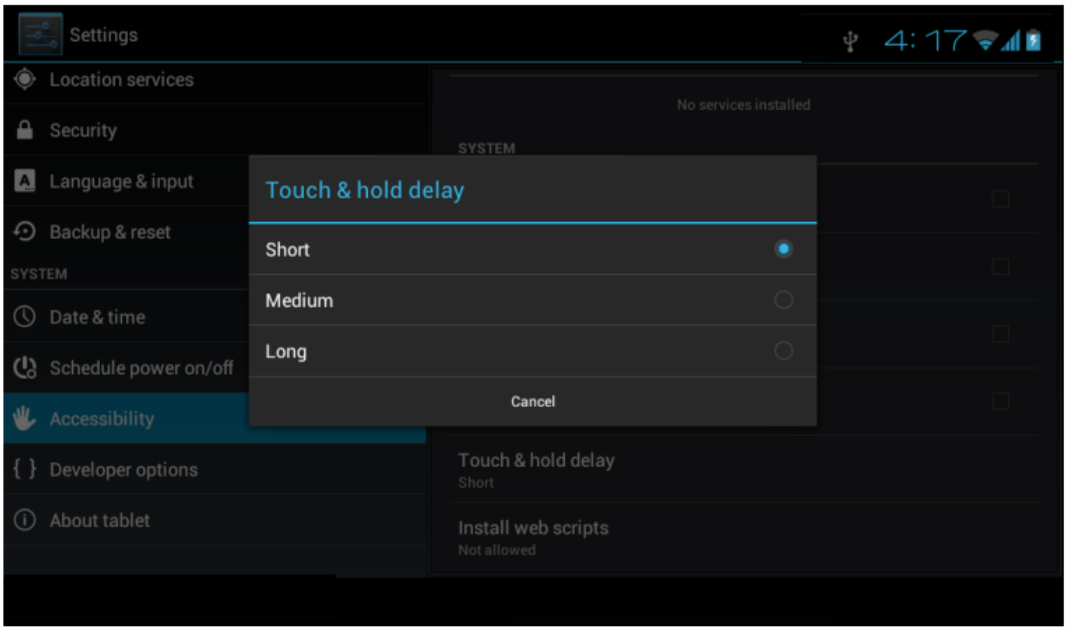

Picture 3.62

3.18-4 Install webpage script

It will allow you install webpage scrip when you open system,, but it will increase the risk when you are browsing webpage.

3.19 Engineer Selection

3.19-1 USB adjustment

After opening USB adjustment, you can use some software to read TABLET software, but when USB adjustment is turned on, USB storage needs to manual adjust.

3.19-2 Keep awaken state

If you open keep awaken state, it wll never auto sleep when your TABLET is charging.

3.19-3 Pointer Location

If you open pointer location, it will display touch vertical and horizontal direction.

3.19-4 Show touches

If you open display touch screen operation, it will display touch opeation on the screen. It is suggested to use with same direction as pointer location.

3.19-5 Show screen update

If you open screen refresh, it will display related area when the area is refreshing.

3.19-6 Show CPU usage

After open CUP usage, in the right top of TABLET will show CPU usage situation.as Picture 3.63

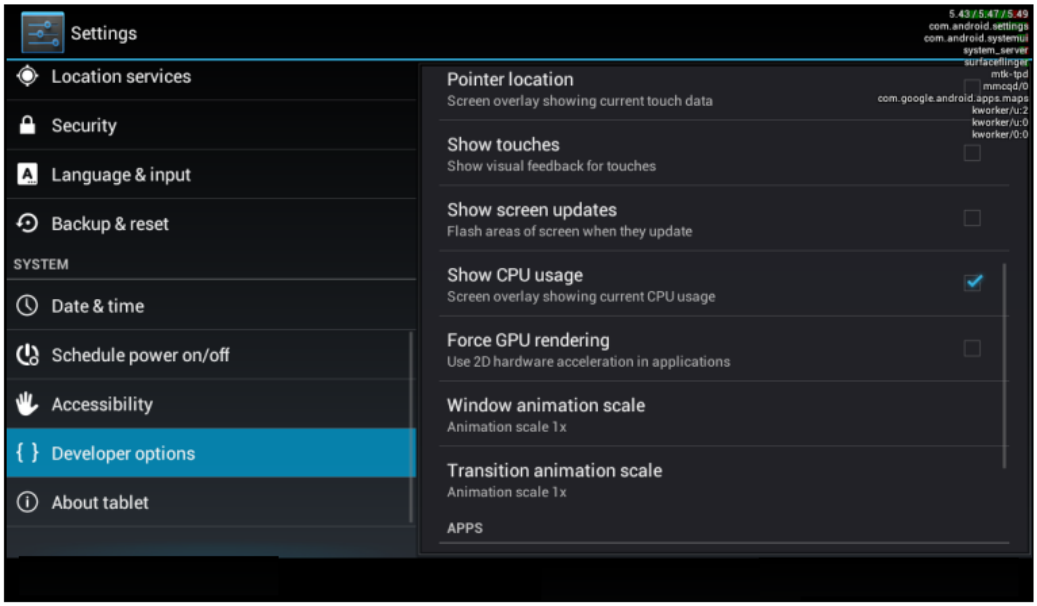

Picture 3.63

3.20 About Tablet

Check TABLET state

1. Check **Setting** application.

2. Click **about tablet**, check **state message, model, Android version, version No** and so on.

3. Click **state message,** check **battery state, battery volumne, SIM state, IMEI number, IP address.**

4 Multi-Media

4.1 Music

Enter into music player: in menu or desktop click music

icon to enter into music player, click the music you want to play, as Picture 4.1:

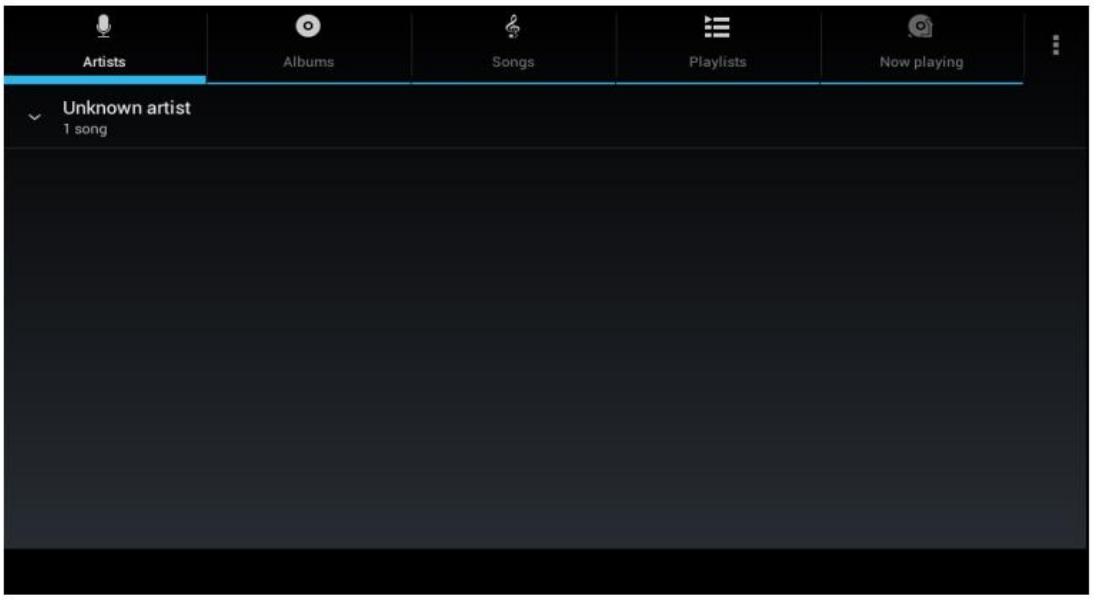

Picture 4.1

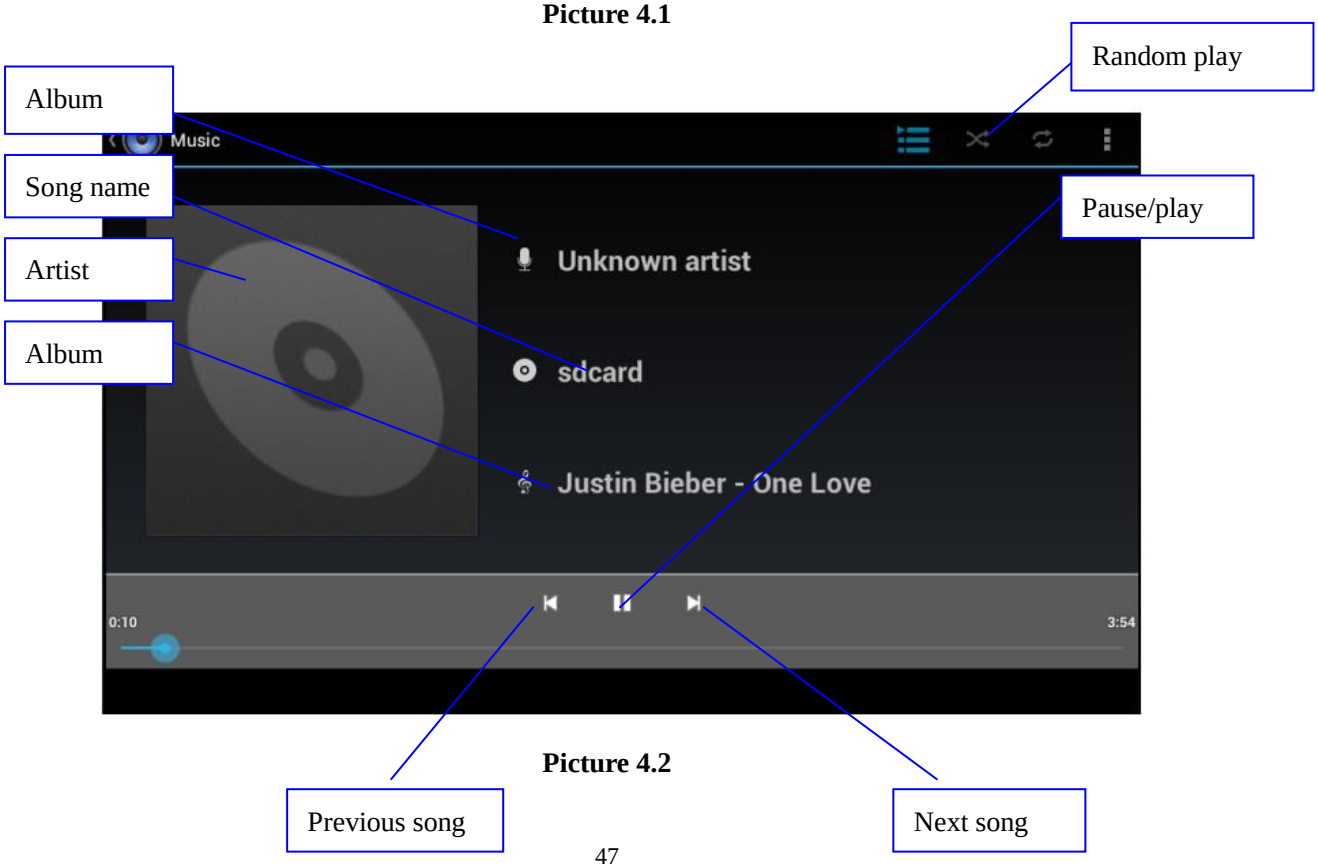

Picture 4.2

1. Drag the progress bar to adjust play progress.
2. Operation of music player button **as Picture 4.2**

4.2 Video

1. Enter video player: choose

application in main menu, choose the video you want to play.
2. Operation of video player button **as Picture 4.3**

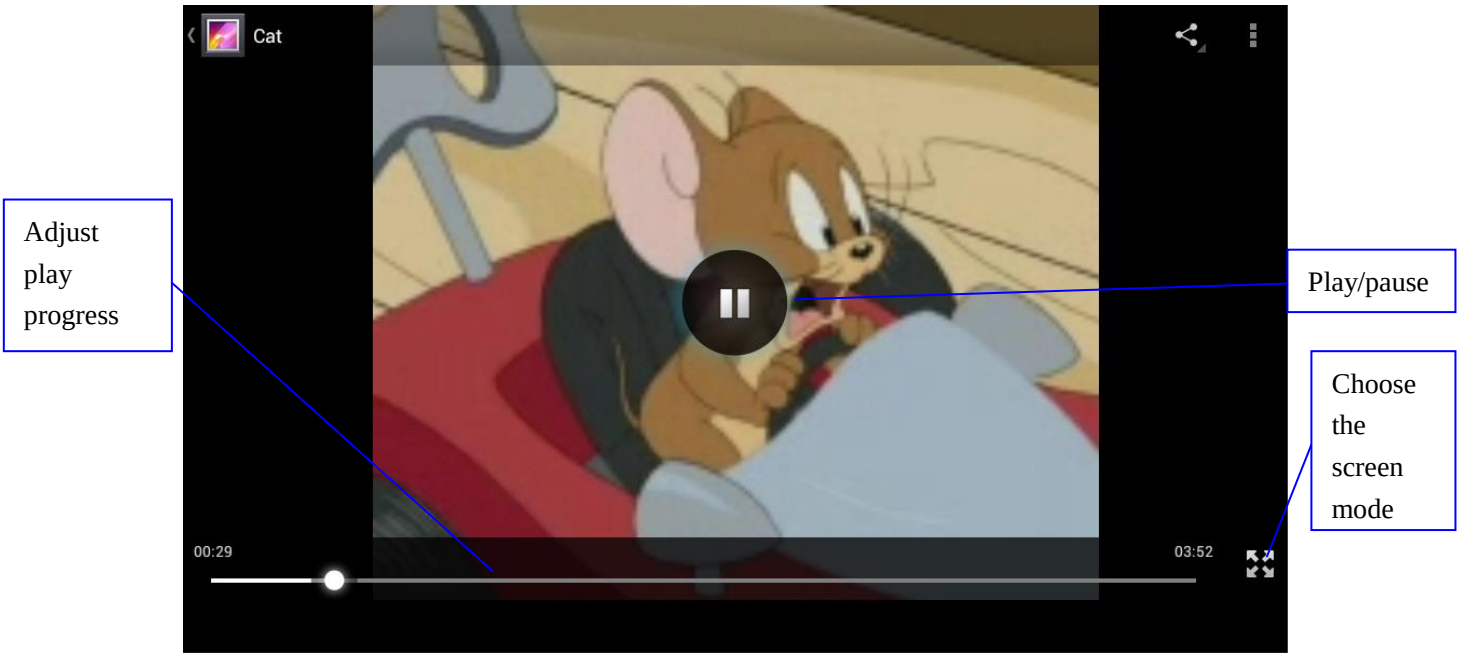

Picture 4.3

4.3 Photo Gallery

Photo gallery

application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the

separete the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

•**Slide Show**

1.Open a picture, use virtual key to click menu key, display menu selection.

2. Click **slide show**, it will auto loop play(or choose button in picture folder)

•**Crop**

1. Click **menu** key to display menu selection.

2. Then click crop, click and drag related area to adjust the cropper.

3. Click cropper and drag it inside and outside to adjust the image.

4. After adjust the size you want, click **crop**.

5. If you wish to give up to crop, click **cancel** to return to picture browse.

•**Edit**

1. Click **menu** key, display the menu selection.

2. Click **edit**.

3. Adjust teh brightness, style, color, antialias setting in selection.

4. Click **save**.

5. If you want to give up edit, click **return** key, click **not** to return to picture browse.

4.4 Camera

In the main interface or desktop, click camera application procedure

, enter into camera.

•Operation of camera ,Switch camera: choose **Menu** key, click **switch front/back camera,** as Picture 4.4

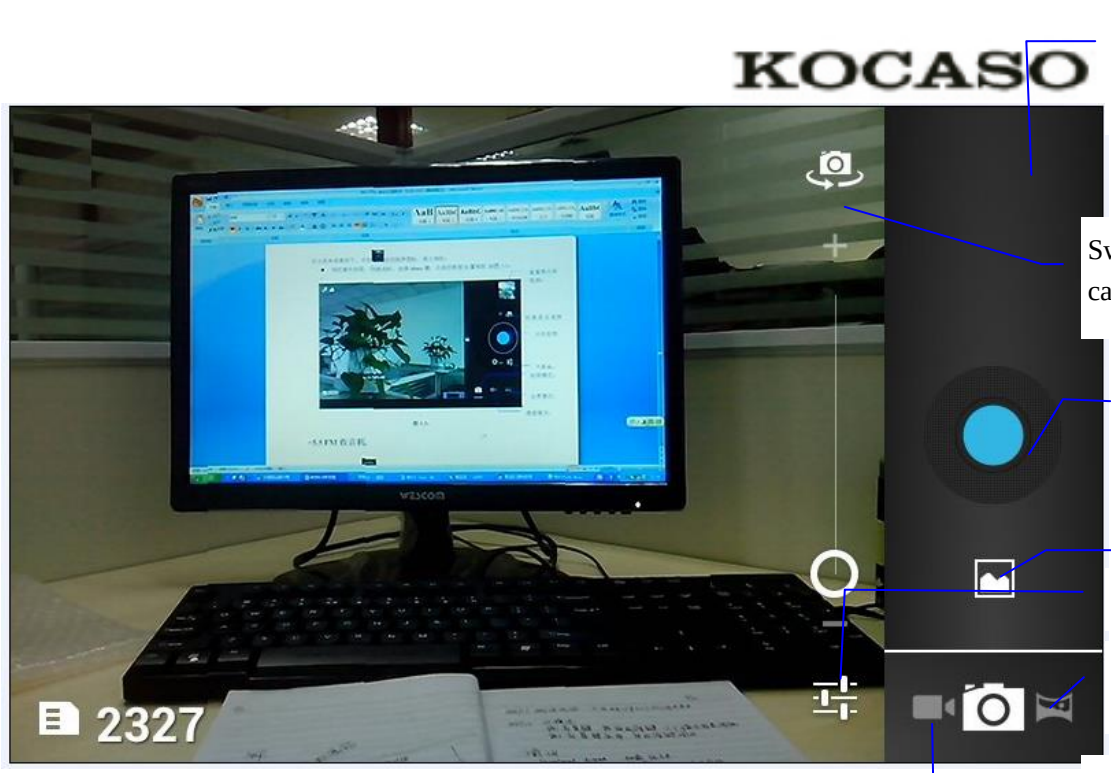

Picture 5.4

4.5 FM Radio

Click in the main interface or desktop to enter into FM radio interface:

- Radio button operation instruction **as Picture 4.5**:

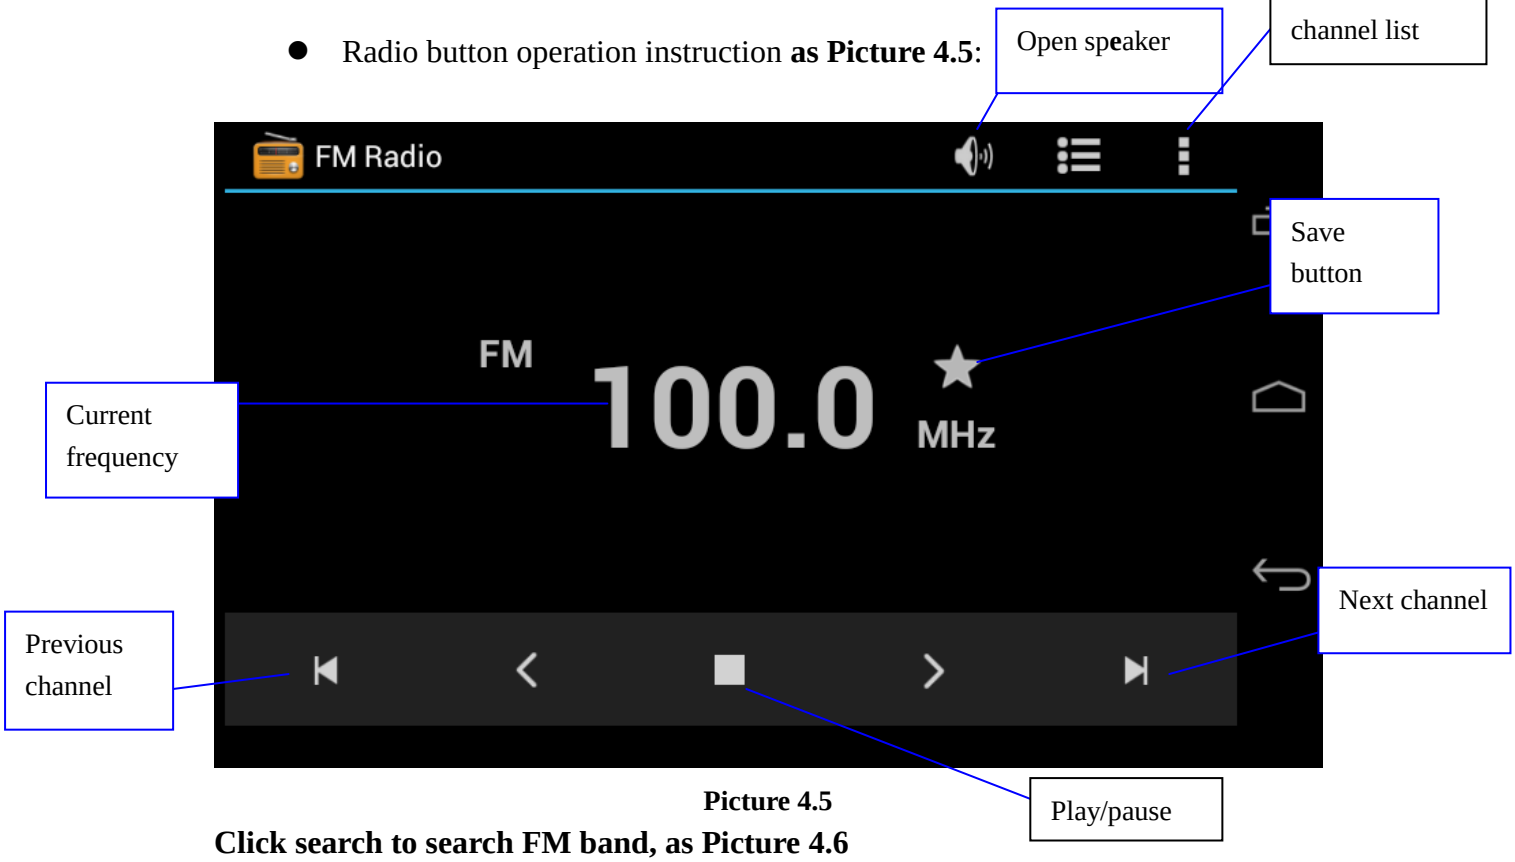

Picture 4.5

Click search to search FM band, as Picture 4.6

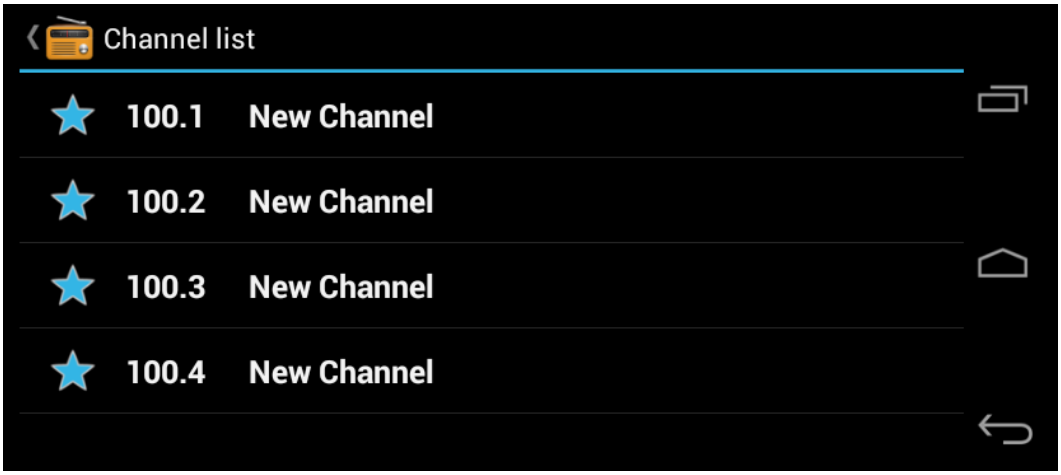

Picture 4.6

•RDS setting: click Menu key in interface, click the munu button, and choose RDS settings, enter into RDS setting as Picture 4.7, and choose the selection you want to add

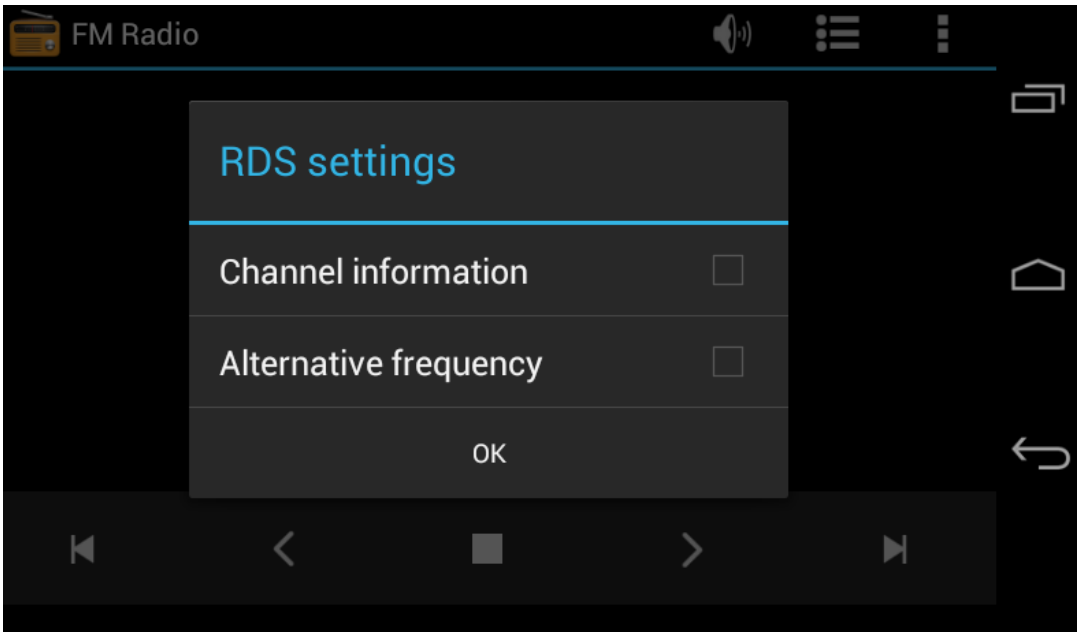

Picture 4.7

•Save channels: Click button in the main interface to save the channel, and the channel will be saved in channels list.

Note: You need to insert earphone as antenna when using FM radio, If no antenna, your TABLET can’t search any frequency band.

5 Communication Function

5.1 Phone

Click **Phone** application procedure
Operate as Picture 5.1

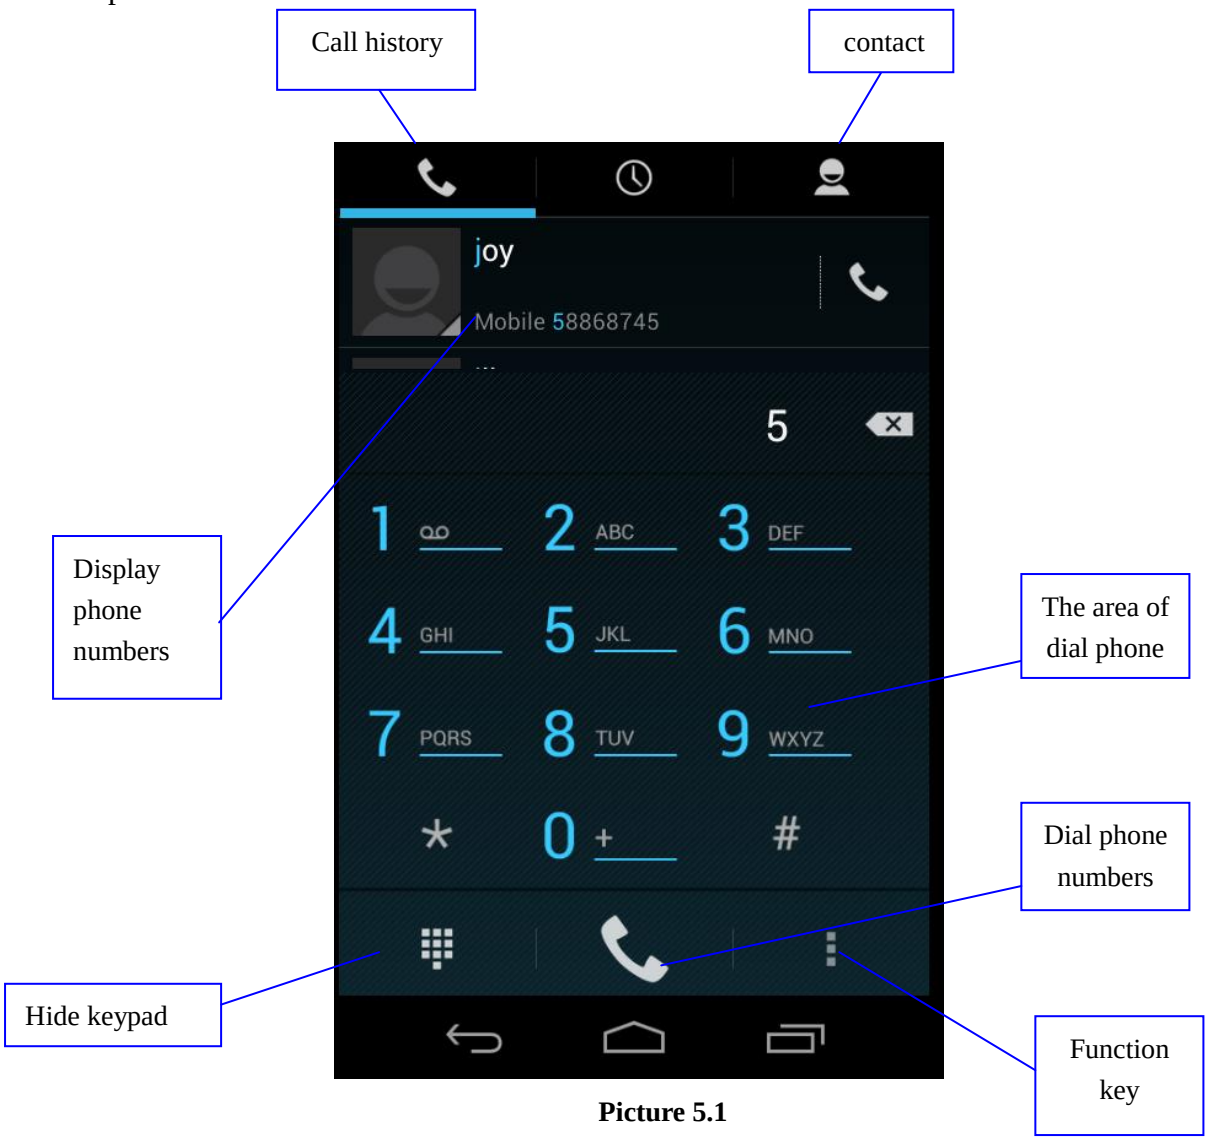

Picture 5.1

5.2 Text Message

1. Enter into main menu, choose application procedure.

2 Click **"Edit new message"**

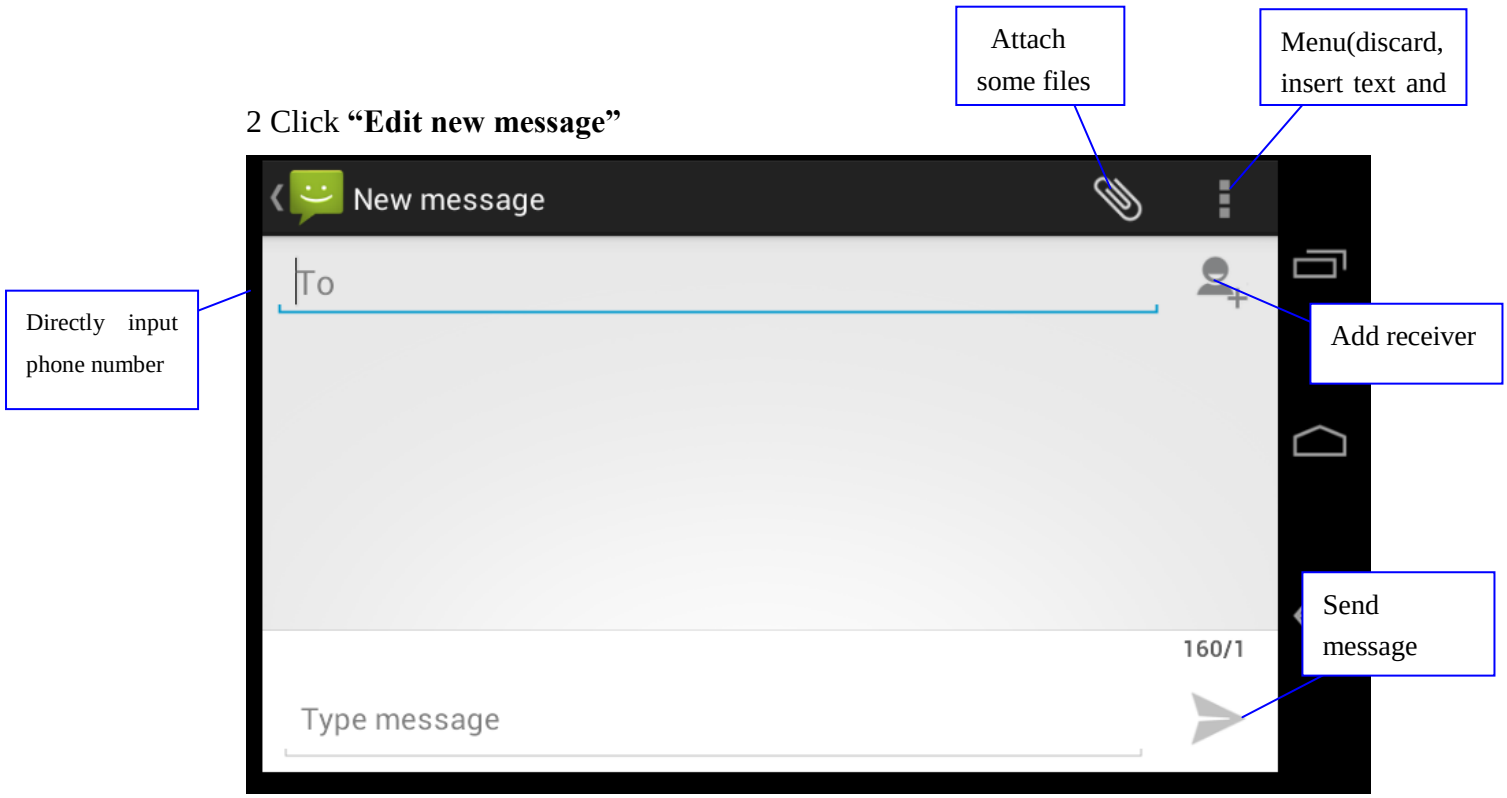

Picture 5.2

5.3 Contact List

Click Contact list

in the main interface, enter into the contact list **as Picture 5.3**

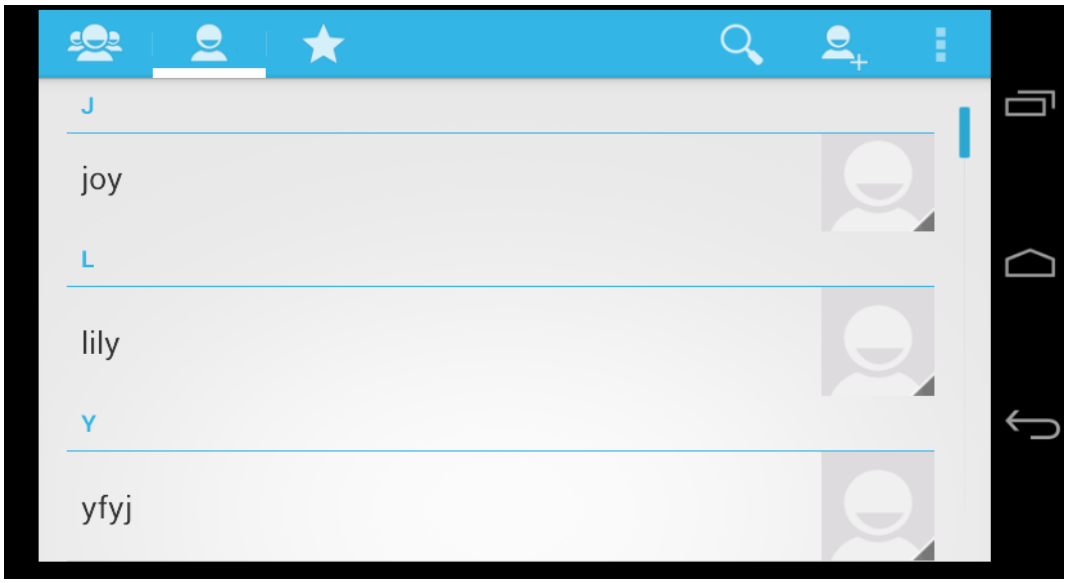

Picture 5.3

- Search contact: click button, enter into search function
- Add contact: click button, enter into add contact interface.

6 Internet

6.1 Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 3.1 for wireless and internet setting), click IE browser in the main menu or desktop to enter the IE interface, **as Picture 6.1.**

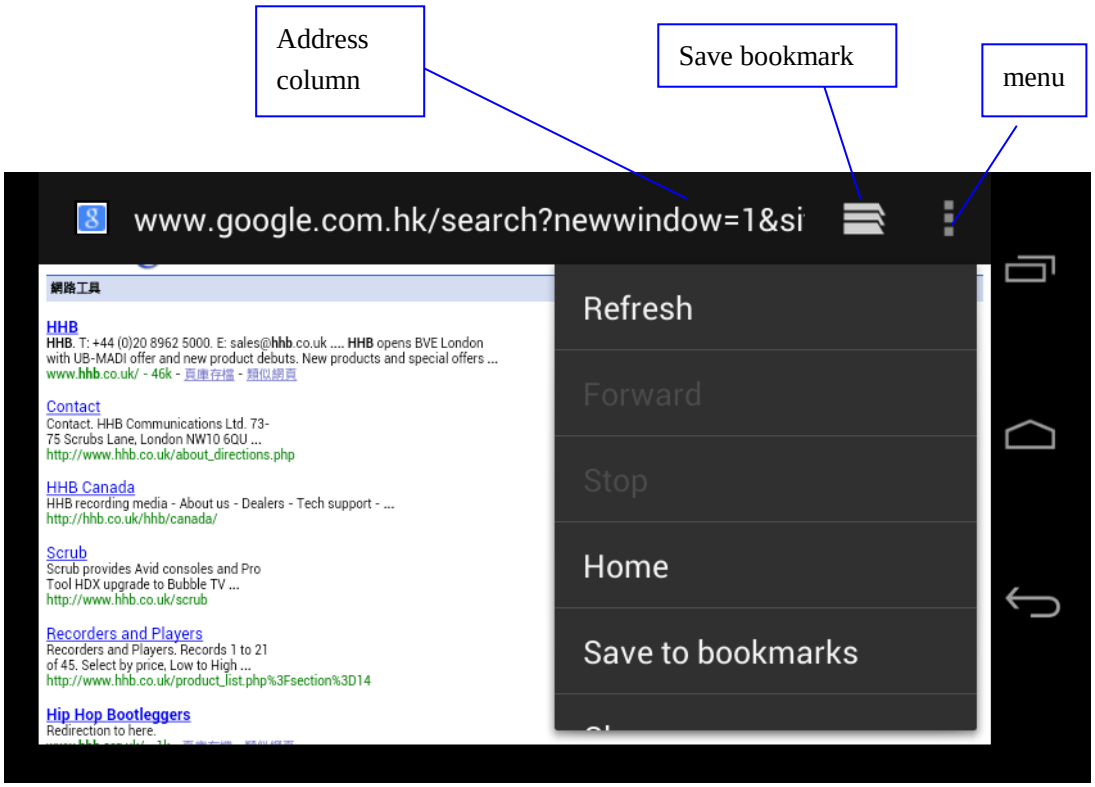
Address column
Save bookmark
menu
www.google.com.hk/search?newwindow=1&si
網路工具
HHB
HHB. T: +44 (0)20 8962 5000. E: sales@hhb.co.uk .... HHB opens BVE London with UB-MADI offer and new product debuts. New products and special offers ...
www.hhb.co.uk/ - 46k - 頁庫存檔 - 類似網頁
Contact
Contact. HHB Communications Ltd. 73-75 Scrubs Lane, London NW10 6QU ...
http://www.hhb.co.uk/about_directions.php
HHB Canada
HHB recording media - About us - Dealers - Tech support - ...
http://hhb.co.uk/hhb/canada/
Scrub
Scrub provides Avid consoles and Pro Tool HDX upgrade to Bubble TV ...
http://www.hhb.co.uk/scrub
Recorders and Players
Recorders and Players. Records 1 to 21 of 45. Select by price, Low to High ...
http://www.hhb.co.uk/product_list.php%3Fsection%3D14
Hip Hop Bootleggers
Redirection to here.
Refresh
Forward
Stop
Home
Save to bookmarks

Picture 6.1

Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, as Picture 6.1.2 and you can click the menu you can refresh ,save to bookmarks, share page, bookmarks, history and setting the webpage.

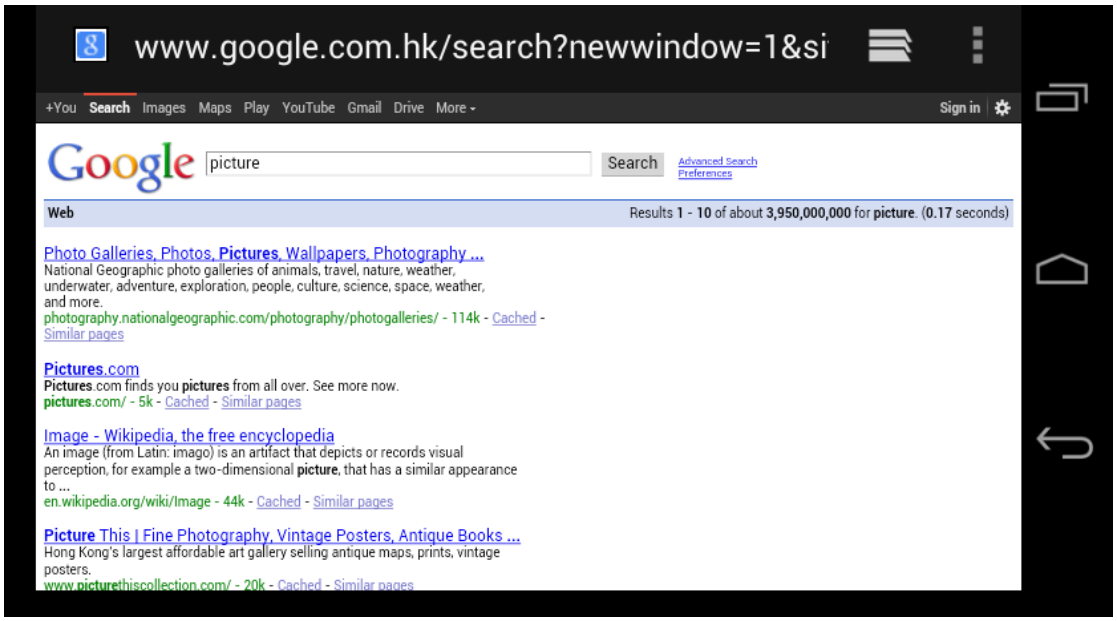
www.google.com.hk/search?newwindow=1&si
+You Search Images Maps Play YouTube Gmail Drive More
Sign in
Google
picture
Search
Advanced Search
Preferences
Web
Results 1 - 10 of about 3,950,000,000 for picture. (0.17 seconds)
Photo Galleries, Photos, Pictures, Wallpapers, Photography ...
National Geographic photo galleries of animals, travel, nature, weather, underwater, adventure, exploration, people, culture, science, space, weather, and more.
photography.nationalgeographic.com/photography/photogalleries/ - 114k - Cached - Similar pages
Pictures.com
Pictures.com finds you pictures from all over. See more now.
pictures.com/ - 5k - Cached - Similar pages
Image - Wikipedia, the free encyclopedia
An image (from Latin: imago) is an artifact that depicts or records visual perception, for example a two-dimensional picture, that has a similar appearance to ...
en.wikipedia.org/wiki/Image - 44k - Cached - Similar pages
Picture This | Fine Photography, Vintage Posters, Antique Books ...
Hong Kong's largest affordable art gallery selling antique maps, prints, vintage posters.
www.picturethiscollection.com/ - 20k - Cached - Similar pages

Picture 6.1.2

6.2 Email

Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163),as Picture 6.2

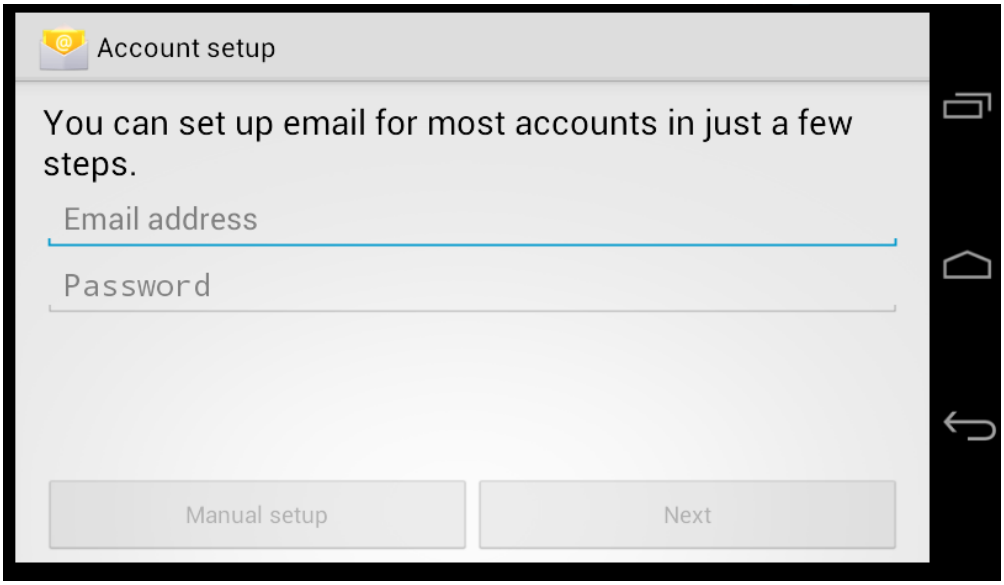

Picture 6.2

a. Email Setting

1. After you click the sending email icon , you can see the email setting guide, which can help you to set.

2. Input your email address and password.

3. Click “Next step” button, choose your email type is POP3 or IMAP.

4. Click “Next Step” button to check whether the email box servicer can receive or send emails

5. Input the email account and display the email subiject, and click **finish.**

6. If the email box is available, you will enter into your mail box automatically.

b. Delete the email account

You can delete setted POP3 or IMAP email account from your TABLET.

Click .

1. Enter into your mail box.
2. Press Menu key.
3. Click Account
4. Press the account you want to delete.
5. Click confirms to remove.

c. Send E-mail

1. Click to display your mail box.
2. Click the inbox, it will refresh the new emails automatically; click it to read new email.
3. Press Menu key. Menus will popup.
4. Click **Edit** to enter into new email editing interface.
5. Input the receiver's email address.
6. Input the subject and email content.
7. If you want to add attachment, click menu key, the menu popup.
8. Click "Attach file" (photo, music, video, contacts).
9. Click "Send" to send the email out.

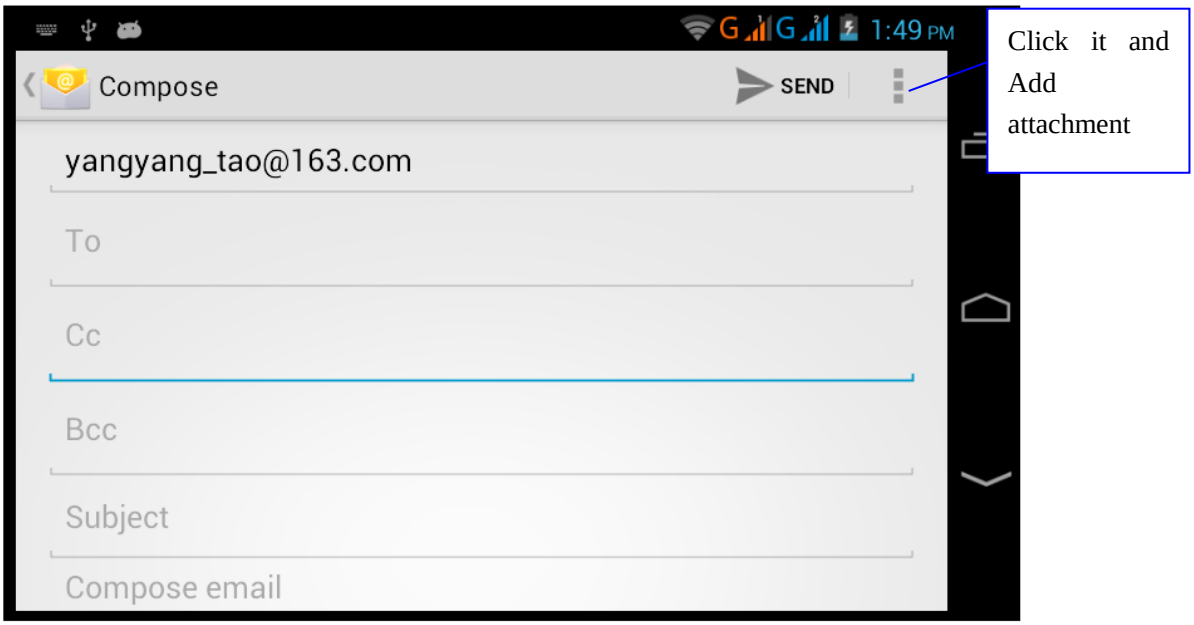

Picture 6.3

7 GPS Function

7.1 GPS Navigation

1. Map of the third parties is required for TABLET internal GPS satellite signal receiver positioning, after installation the device can accurately implement traffic real-time navigation, meet the needs of outdoor navigation.

2. Enter into setting interface, click

icon, enter into below **picture 7.1**

Picture 7.1

When positioning successfully, the blue parts will turn to green color, and it shows the latitude, longitude, height, speed, and the time of your location.

The value indicates the signal strength, the positioning time is relavant to time zone in your setting, if the time is not inconsistent with real time in your location, please check the time zone in your setting is correct or not.

8 Other Application Procedures

8.1 Clock

Click **Clock** procedure, enter into below interface **as Picture 8.1**.

There are clock, picture, music and homepage buttons.

Picture 8.1

8.2 Calculator

1. Click

.
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calulator to calculate.

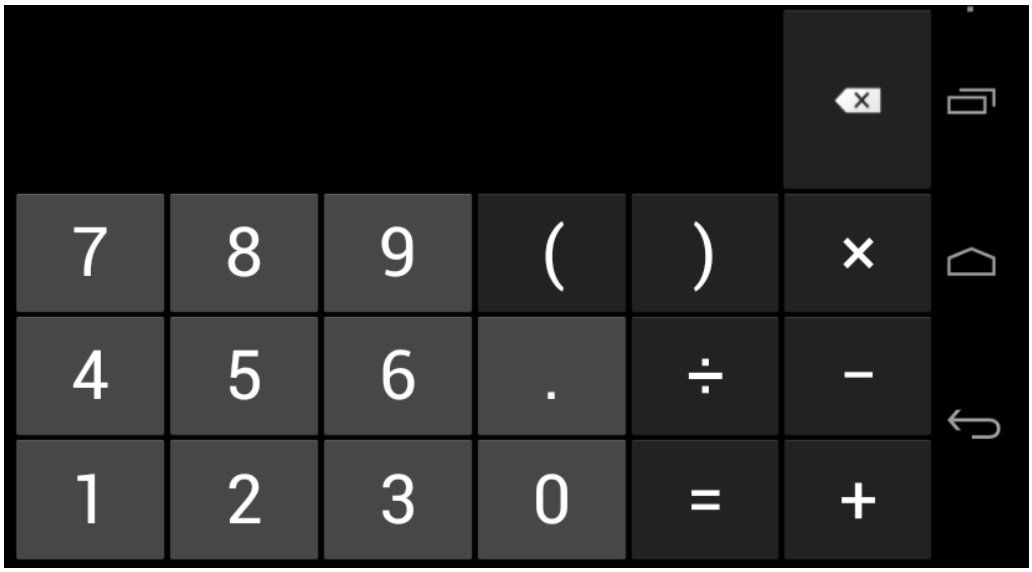

Pictuer 8.2

8.3 File Manager

File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.

In the main menu or desktop, click the document manager icon to enter into documents manager.

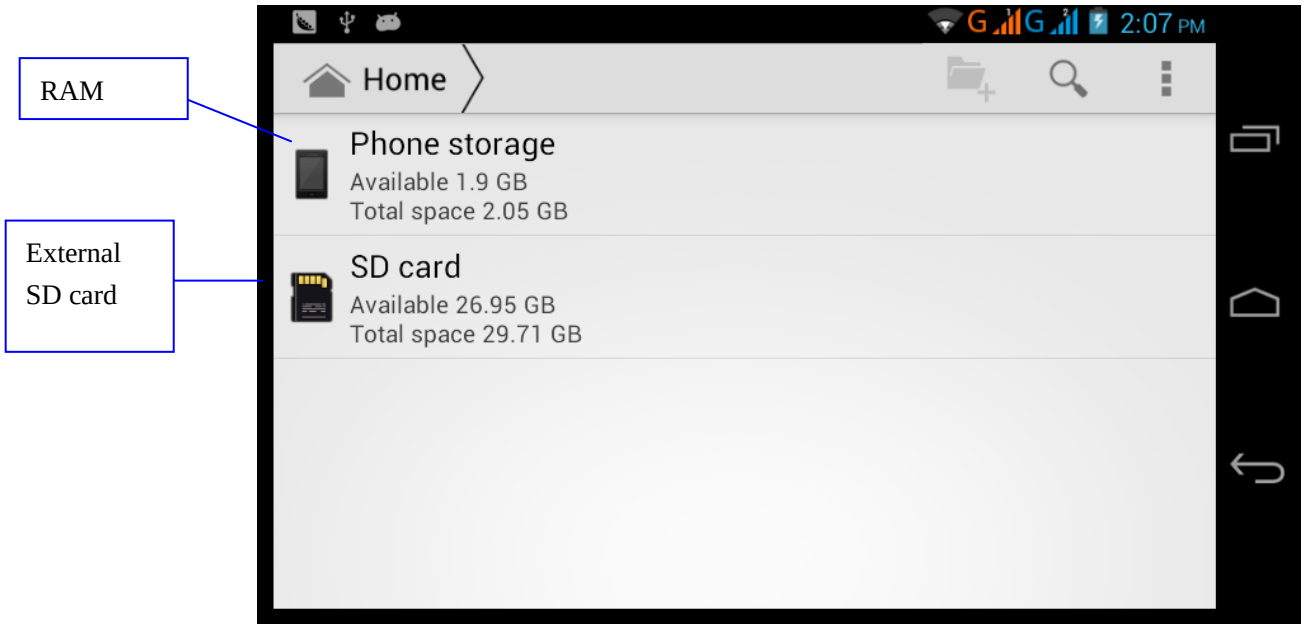

Picture 8.3

a. Copy, cut, delete, rename the files and folder: choose the file or folder, long

pressthe file or folder to enter into the interface as Picture 9.4, you can operate the file or folder.

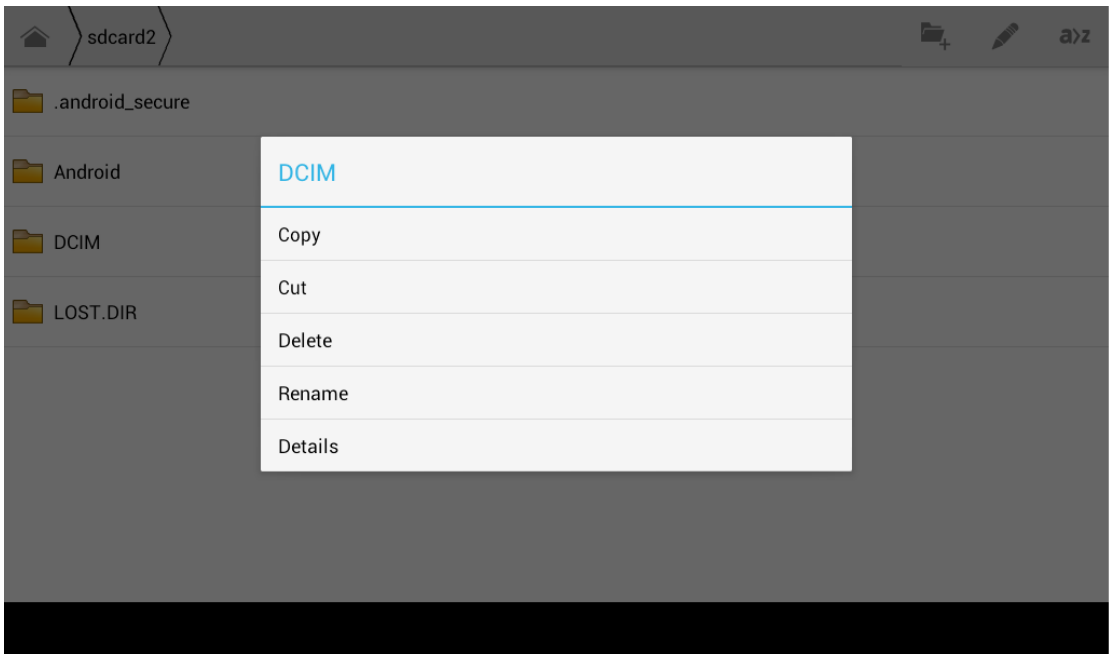

Picture 8.4

b. Paste the copy or cut file: choose the file you want to paste, choose right top icon to enter into **Picture 8.5**, choose right top icon to enter into **Picture 8.6**

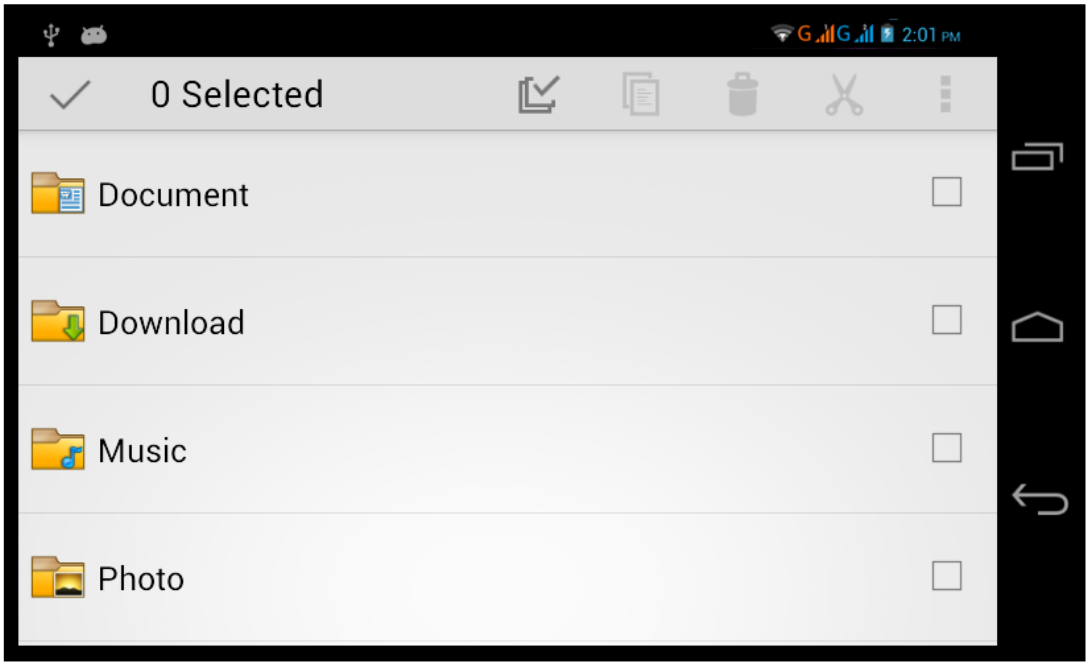

Picture 8.5

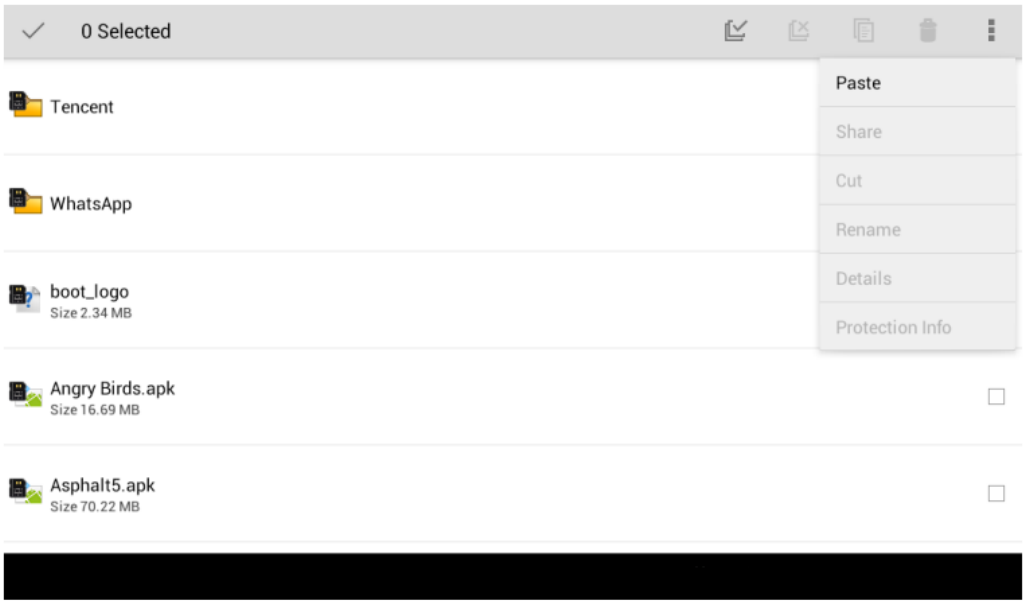

Picture 8.6

c. Share file:choose any file, long press it, it will popup “share”, choose the share way you want in the list

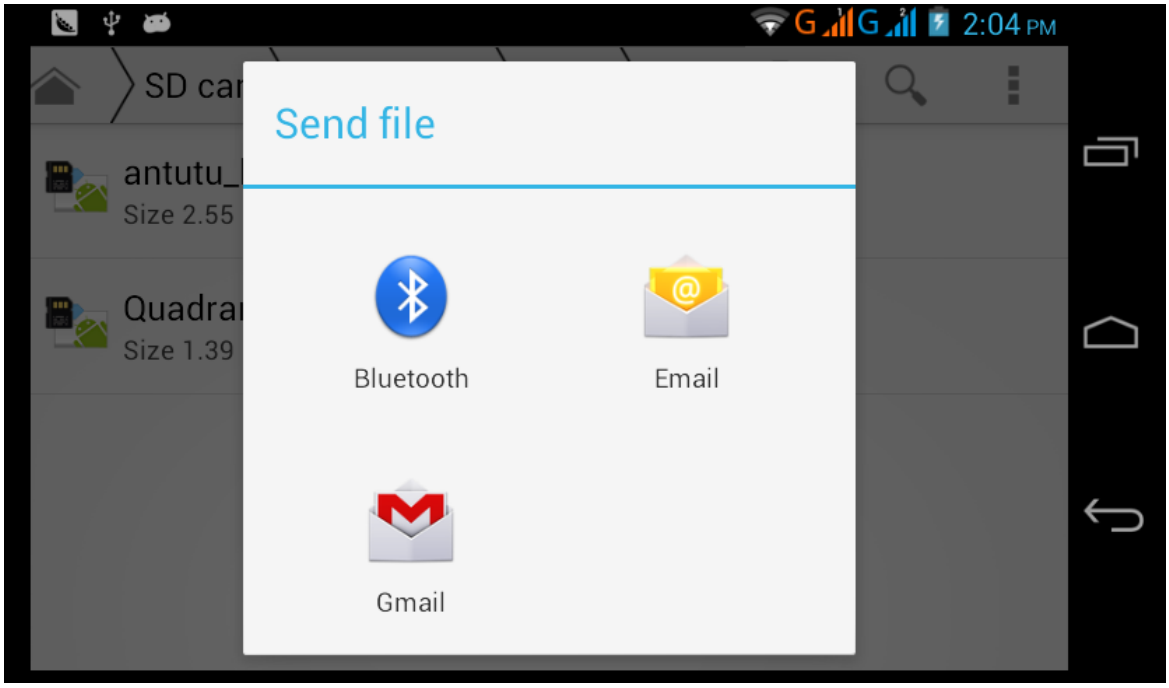

Picture 8.7

d. Install apk file：Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.

e. Build new folder: Choose the menu you want to build the file, click icon in right top, choose new folder, you can build new folder as reminder.

8.4 Recorder

In the main interface or desktop, click recorder icon to enter into record interface, click record key to start record. Click Stop key to stop recording. Click Play key to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually.
Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

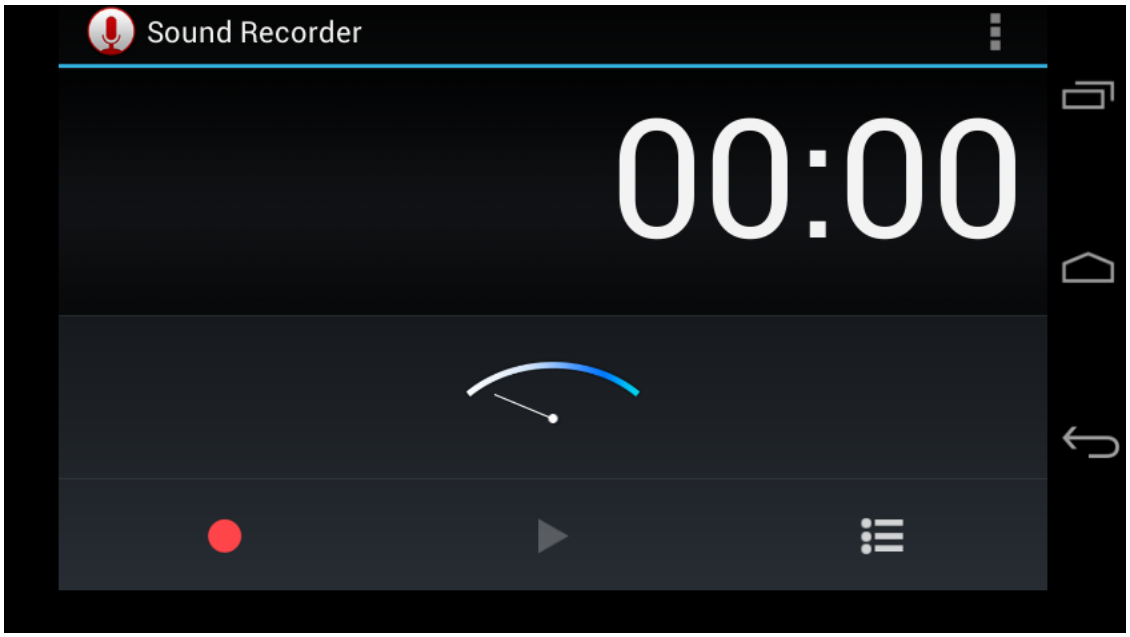

Picture 8.8

Appendix Ⅰ Frequently Asked Questions

Q: Why won't my device turn on?

Make sure your tablet has been charged for at least four hours prior to use. When plugging in the cable, make sure you are not accidentally plugging it into the headphone jack. Also, the power button is on the side (for tablets) and not the one on the front of the touchscreen. The button on the front is for navigation.

Q: Why won't this unit connect to Ethernet?

Assuming your unit does have the RJ45 port, you want to make sure that Wireless is turned off. If Wi-Fi is on, it will negate the Ethernet connection.

Q: Why does my unit have scratches/bubbles on the screen?

These units ship with a very fine plastic film to protect the item in transit. This film is intended to be removed prior to use. Sometimes this takes a strong fingernail or some similar item to peel it off.

Q: Should I perform a Firmware Update?

Not necessarily. This is actually intended if obscure issues with the tablet occur. Unless you are having issues with the tablet which a Factory Data Reset has not resolved, it is not advised that you perform this step.

However, if you are sure you wish to attempt this procedure, please visit the following link for available firmware downloads and the instructions on how to perform the update:

http://mymidpad.com/firmware/

Q: Why don't I see a firmware version for my model?

We are always working on providing the latest and best firmware for all of our devices. If you don't see your specific model listed, please check back soon.

Q: I don't remember my password, what can I do?

If you have previously added a Google account, you may be prompted for a password reminder if you fail the security 4 or 5 times. Otherwise, please refer to **Should I perform a Firmware Update?**

Q: How long should my battery last after charging?

As for battery life, this depends on which model tablet you use. Our Android 2.2 tablets usually average around 1-4 hours. The Android 4.0 tablets approximately twice that. However, that is totally relative to factors such as how bright the screen is during use, how often it is using the wireless connection, what background processes are running, if you are using a Live Wallpaper, and more. It is very difficult to estimate the duration of a full charge in consideration of these issues. If this seems like abnormally poor performance, just let us know.

Q: Why does my screen not respond properly when I use the touchscreen?

This may be a couple of different things. If this only occurs when charging from a power supply, this may be due to noise from the power source not being adequately filtered out. You may wish to give the unit a full charge and then disconnect from power for use, or, if possible, charge with a USB cable instead. Otherwise, your screen calibration may be off. To correct this, check for Settings->Touchpad Calibration to see if you can recalibrate this to resolve the issue.

Q: Why is my tablet stuck at boot up, and the Android screen will not go away?

Please see above: **Should I perform a Firmware Update?**